SDC1A809
SDC3K801

Condensing Dryer
user manual

Planet First 100% Recycled Paper

This manual is made with 100% recycled paper.

imagine the possibilities

Thank you for purchasing this Samsung product.

CE

SAMSUNG

SDC1A809-02805J-05_EN_140507.indd 1 2014-05-07 □□ 6:29:19

contents

INSTALLING YOUR DRYER 9

9 Tools needed for installation
9 See Dryer Exterior
10 Check before installing
10 Before using the product
10 Important to installer
10 Location considerations
10 Alcove or closet installation
11 Electrical requirements
11 Grounding
12 Installation side by side
12 Final installation checklist
13 Draining water without using the water tank
13 Connecting the drain hose
15 Installation stacking
16 Door Reversal

OPERATING INSTRUCTIONS, TIPS 18

18 Overview of the control panel
20 Child lock
20 Signal off
21 My cycle
21 Delay End
21 Interior Lamp
22 Rack Dry
23 Load the dryer properly
23 Getting started

CARE AND CLEANING 24

24 Clean the filter case
24 Clean the condenser
24 Control Panel
24 Tumbler
24 Stainless Steel Tumbler
24 Dryer Exterior
25 Dumping condensed water
25 Cleaning the filter case
26 Cleaning the condenser assembly

SPECIAL LAUNDRY TIPS 27

27 Special laundry tips

TROUBLESHOOTING 28

28 Check these points if your dryer…
30 Information codes

APPENDIX 31

31 Fabric care chart
32 Protecting the environment
32 Declaration of conformity
32 Specifications
33 Cycle chart
34 Consumption data
35 Sheet of household tumble driers

SDC1A809-02805J-05_EN_140507.indd Sec2:2 2014-05-07 6:29:44

safety information

Congratulations on your new Samsung Dryer. This manual contains important information on the installation, use, and care of your appliance. Please take the time to read this manual to take full advantage of your dryer's many benefits and features.

⚠ WARNING - Risk of Fire

- Clothes dryer installation must be performed by a qualified technician.
- Install the clothes dryer according to the manufacturer's instructions and local codes.
- To reduce the risk of severe injury or death, follow all installation instructions.

WHAT YOU NEED TO KNOW ABOUT SAFETY INSTRUCTIONS

Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, or operating your dryer.

Always contact your manufacturer about problems or conditions you do not understand.

IMPORTANT SAFETY SYMBOLS AND PRECAUTIONS

⚠ **WARNING**	Hazards or unsafe practices that may result in **severe personal injury or death**.
⚠ **CAUTION**	Hazards or unsafe practices that may result in **minor personal injury or property damage**.
⚠ **CAUTION**	To reduce the risk of fire, explosion, electric shock, or personal injury when using your washer, follow these basic safety precautions:

	Do NOT attempt.
	Do NOT disassemble.
	Do NOT touch.
	Follow directions explicity.
	Unplug the power plug from the wall socket.
	Make sure the machine is grounded to prevent electric shock.
	Call the service center for help.
	Note
	Read operator's manual

SDC1A809-02805J-05_EN_140507.indd Sec1:3 2014-05-07 □□ 6:29:44

safety information

⚠ WARNING To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following:

Do not let children (or pets) play in or on your product. The product door does not open easily from the inside and children may be seriously injured if trapped inside.

This appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

For use in Europe: This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This appliance should be positioned so that the power plug, the water supply taps, and the drain pipes are accessible.

For appliances with ventilation openings in the base, that a carpet must not obstruct the openings.

The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.

CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

SDC1A809-02805J-05_EN_140507.indd Sec1:4 2014-05-07 □□ 6:29:44

The tumble dryer is not to be used if industrial chemicals have been used for cleaning.

The lint trap has to be cleaned frequently, if applicable.

Lint must not to be allowed to accumulate around the tumble dryer. (not applicable for appliances intended to be vented to the exterior of the building)

Adequate ventilation has to be provided to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.

Do not dry unwashed items in the tumble dryer.

Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.

Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.

Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.

The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.

Remove all objects from pockets such as lighters and matches.

WARNING: Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.

Exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels.

The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer, in such a way that a full opening of the tumble dryer door is restricted.

SDC1A809-02805J-05_EN_140507.indd Sec1:5 2014-05-07 □□ 6:29:44

WARNING SEVERE WARNING SIGNS FOR INSTALLATION

The installation of this appliance must be performed by a qualified technician or service company.
- Failure to do so may result in electric shock, fire, an explosion, problems with the product, or injury.

Plug the power cord into an AC 220~240V/50Hz wall socket or higher and use the socket for this appliance only. In addition, do not use an extension cord.
- Sharing a wall socket with other appliances using a power strip or extending the power cord may result in electric shock or fire.
- Ensure that the power voltage, frequency and current are the same as those of the product specifications. Failure to do so may result in electric shock or fire. Failure Plug the power plug into the wall socket firmly.

Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.
- Unplug the power plug and clean it with a dry cloth.
- Failure to do so may result in electric shock or fire.

Keep all packaging materials well out of the reach of children, as packaging materials can be dangerous to children.
- If a child places a bag over its head, it may result in suffocation.

This appliance must be properly grounded.
Do not ground the appliance to a gas pipe, plastic water pipe, or telephone line.
- This may result in electric shock, fire, an explosion, or problems with the product
- Never plug the power cord into a socket that is not grounded correctly and make sure that it is in accordance with local and national codes.

Do not install or keep the product exposed to the outdoor elements.

Do not use a damaged power plug, damaged power cord or loose wall socket.
- This may result in electric shock or fire.

If the plug (power supply cord) is damaged, it must be replaced by the manufacturer or its service agent or a similar qualified technician in order to avoid a hazard.

This appliance should be positioned to be accessible to the power plug after installation.

Do not pull or excessively bend the power cord.
Do not twist or tie the power cord.
Do not hook the power cord over a metal object, place a heavy object on the power cord, insert the power cord between objects, or push the power cord into the space behind the appliance.
- This may result in electric shock or fire.

Do not pull the power cord, when unplugging the power plug.
- Unplug the power plug by holding the plug.
- Failure to do so may result in electric shock or fire.

This appliance must be properly grounded. Never plug the power cord into a receptacle that is not grounded adequately and in accordance with local and national codes. See installation instructions for grounding this appliance.

SDC1A809-02805J-05_EN_140507.indd Sec1:6 2014-05-07 6:29:44

⚠ WARNING SEVERE WARNING SIGNS FOR USING

Do not let children or pets on or into the product. In addition, when disposing of this product, disassemble the door lock (lever).
- This may result in children falling and injuring themselves.
- If children become locked in the product, there is a danger of suffocation.

Do not try to access the inside of the product when the drum is rotating.

Do not sit on the product or lean against the door.
- This may result in the product turning over and resulting in injury.

Dry the laundry only after it was spun by an appropriate washing machine.

Do not dry unwashed items in the tumble dryer.

Do not drink the condensed water.

Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.

Do not dry laundry contaminated by inflammable materials such as gasoline, kerosene, benzene, thinner, alcohol, etc.
- This may result in electric shock, fire or explosion.

Do not let pets chew or play with the dryer.
- This may result in electric shock or injury.

When disposing of the product, separate the door and the power cord before disposing of the product.
- Failing to do so may result in damage to the power code or an injury.

Do not touch the power plug with wet hands.
- This may result in electric shock.

Do not repair, replace, or attempt to service any part of the appliance unless specifically recommended in the user-repair instructions. You must also have the skills necessary to service this appliance.

Do not attempt to repair, disassemble, or modify the appliance yourself.
- Do not use any fuse(such as cooper, steel wire, etc.) other than the standard fuse.
- When repairing or reinstalling the appliance is required, contact your nearest service center.
- Failure to do so may result in electric shock, fire, problems with the product, or injury.

The product you have purchased is designed for domestic use only.

The use for business purposes qualifies as product misuse. In this case, the product will not be covered by the standard warranty provided by Samsung and no responsibility can be attributed to Samsung for malfunctions or damages resulting from such misuse.

SDC1A809-02805J-05_EN_140507.indd Sec1:7 2014-05-07 □□ 6:29:44

CAUTION SIGNS FOR USING

Do not stand on top of the appliance or place objects (such as laundry, lighted candles, lighted cigarettes, dishes, chemicals, metal objects, etc.) on the appliance.
- This may result in electric shock, fire, problems with the product, or injury.

Do not touch the glass door and inside of the drum during or just after drying as it is hot.
- This may result in burns.

Do not press the buttons using sharp objects such as pins, knifes, fingernails, etc.
- This may result in electric shock or injury.

Do not use dry cleaning detergent directly and do not wash, rinse, or spin laundry contaminated by dry cleaning detergent.
- This may result in spontaneous combustion or ignition due to the heat of the oxidation of the oil.

Do not dry laundry containing forming rubber (latex) or similar rubber textures.
- If forming rubber is heated, it may start a fire.

Do not dry laundry contaminated by vegetable oil or cooking oil as a large amount of the oil will not be removed when washing the laundry. In addition, use the Cool Down cycle so that the laundry is not heated.
- The oxidization heat of the oil may start a fire.

Make sure that the pockets of all clothing to be washed are empty.
- Hard, sharp objects, such as coins, safety pins, nails, screws, or stones can cause extensive damage to the appliance.

Do not wash clothing with large buckles, buttons, or other heavy metal.

Do not use softener or a static electricity remover unless recommended by the manufacturer.
- This may result in damage to the laundry.

Do not use the dryer near dangerous powders such as coal dust, wheat flour, etc.
- This may result in electric shock, fire or an explosion.

Do not place inflammable materials near the product.
- This may result in toxic gases from the product, damage to parts, electric shock, fire or an explosion.
- The appliance should not be placed behind lockable doors etc.

SEVERE WARNING SIGNS FOR CLEANING

Do not clean the appliance by spraying water directly onto it.
Do not use benzene, thinner or alcohol to clean the appliance.
- This may result in discolouration, deformation, damage, electric shock or fire.

Before cleaning or performing maintenance, unplug the appliance from the wall socket.
- Failure to do so may result in electric shock or fire.

Clean the filter case before and after using the dryer.

Clean the inside of the product on a regular basis by asking an authorized service engineer.

Clean the condenser with water once a month.

The interior of the dryer should be cleaned periodically by qualified service personnel.

SDC1A809-02805J-05_EN_140507.indd Sec1:8 2014-05-07 6:29:44

installing your dryer

TOOLS NEEDED FOR INSTALLATION

Hire a professional to install this dryer properly. If there is a service call performed as a result of poor setup, adjustment, and connection, it is considered the responsibility of the installer. If you install the dryer you are responsible.

Make sure you have everything necessary for proper installation (AC 220~240V/50Hz).

1. A GROUNDED ELECTRICAL OUTLET is required. See Electrical Requirements (See page 11).
2. CONDENSING SYSTEM - Condenses, processes and circulates hot and humid air internally using an internal heat condenser.

SEE DRYER EXTERIOR

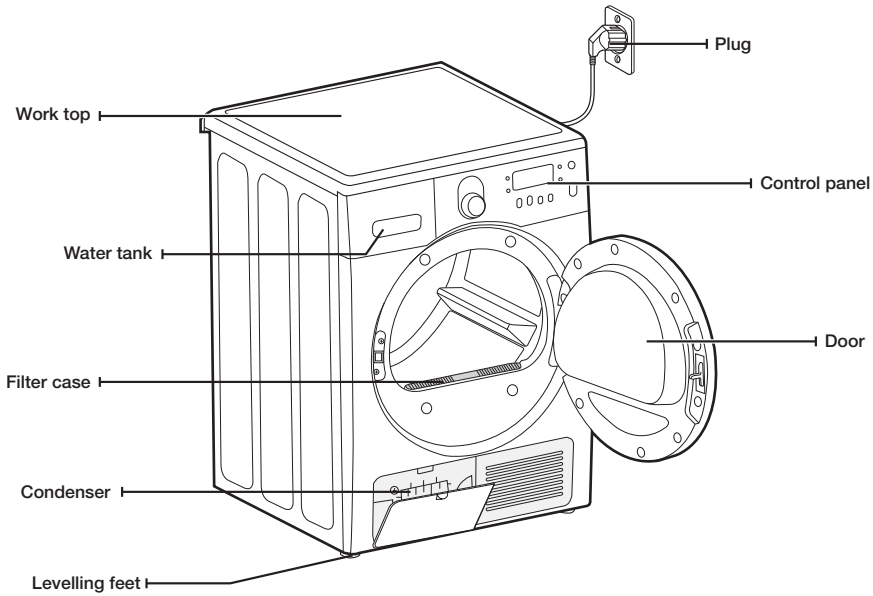

Parts



Hose guide	Cable tie	Hose connector	Long drain hose(2m)	Manual book

SDC1A809-02805J-05_EN_140507.indd Sec3:9 2014-05-07 6:29:44

installing your dryer

CHECK BEFORE INSTALLING

- Do not plug the power cord into the wall outlet before completing the dryer installation.
- Check the appearance of the product for any damaged parts before starting the product installation.
- If there are any parts that appear to be damaged, please contact your nearest Samsung Customer Service Center.
- When moving the product, do not move the product by yourself.
- Take care of the edges of the dryer as they can be sharp.
- Do not install the dryer in a location exposed to frost. Cold water may damage the product.
- Use the product indoors only.
- Do not place the dryer on one side when lifting it, and do not move the dryer in such a way that the internal parts shake. This may result in damage to the internal parts of the product.

BEFORE USING THE PRODUCT

- Check if there are any accessories remaining inside the drum.
- Plug in the power cord just before operating the product.
- Do not block the air inlet hole of the cooling grill at the front of the dryer.
- Do not place inflammable objects near the dryer and keep the surroundings clean.
- Keep the dryer level with the ground.
- Do not remove the adjustable levelling feet of the dryer. They are necessary to keep the product level with the ground.

IMPORTANT TO INSTALLER

Please read the following instructions carefully before installing the dryer. These instructions should be kept for future reference.

⚠ WARNING REMOVE THE DOOR FROM ALL DISCARDED APPLIANCES TO AVOID THE DANGER OF A CHILD SUFFOCATING.

LOCATION CONSIDERATIONS

Because a condensing type has been adopted, which condenses and processes air inside the dryer, external ventilation is not required.

Therefore, The dryer can be installed and used in any location where the temperature is between 5 and 35 degrees centigrade, unlike a conventional dryer that requires an external exhaust system.

ALCOVE OR CLOSET INSTALLATION

To operate safely and properly, your new Dryer requires minimum clearances of:

Sides – 25 mm Rear – 51 mm

Top – 25 mm Front – 465 mm

If both the washing machine and a dryer are installed together, the front of the alcove or closet must have at least 465 mm unobstructed air opening.

SDC1A809-02805J-05_EN_140507.indd Sec3:10 2014-05-07 □□ 6:29:45

ELECTRICAL REQUIREMENTS

Electrical Requirements is AC 220~240V/50Hz.

WARNING

- Improper connection of the equipment grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether your dryer is properly grounded. Do not modify the plug provided with your dryer – if it doesn't fit the outlet, have a proper outlet installed by a qualified electrician.
- To prevent unnecessary risk of fire, electrical shock, or personal injury, all wiring and grounding must be done in accordance with local codes, or in the absence of local codes, It is your responsibility to provide adequate electrical services for your dryer.

GROUNDING

Your dryer must be grounded. If your dryer malfunctions or breaks down, grounding will reduce the risk of electric shock by providing a path of least resistance for the electric current.

Your dryer comes with a power cord having a three-prong grounding plug for use in a properly installed and grounded outlet.

Never connect the ground wire to plastic plumbing lines, gas lines, or hot water pipes.

Improperly connecting the equipment-grounding conductor can result electrical shock.

Check with a qualified electrician or serviceman if you are unsure if the dryer is properly grounded. Do not modify the plug provided with the dryer. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.

WARNING If the product is not grounded, there is a danger of fire or electric shock.

SDC1A809-02805J-05_EN_140507.indd Sec3:11 2014-05-07 □□ 6:29:45

installing your dryer

INSTALLATION SIDE BY SIDE

For proper installation, we recommend that you hire a professional. To install:

1. Move your dryer to an appropriate location for installation. Consider installing the dryer and washer side-by-side. Lay two of the carton cushion-tops on the floor. Tip your dryer on its side so it will lay across both cushion-tops.
2. Set your dryer back in an upright position.
3. To ensure that the dryer provides optimal drying performance, it must be level. To minimize vibration, noise, and unwanted movement,the floor must be a perfectly level, solid surface.

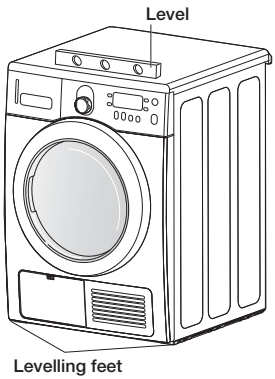

To set the dryer to the same height as the washer, fully retract the levelling feet by turning them counterclockwise, then loosen the legs by turning them clockwise

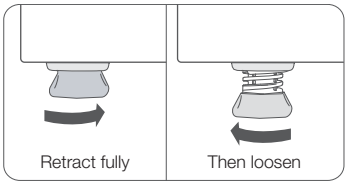

Adjust the levelling feet only as much as necessary to level the dryer.Extending the levelling feet more than necessary can cause the dryer to vibrate.

4. Review Electrical Requirements section (See page 11). BEFORE OPERATING OR TESTING.
5. With a level, check your dryer and make necessary adjustments to the levelling legs.
6. Plug in your dryer, and check operation by using the checklist below.

FINAL INSTALLATION CHECKLIST

- ☐ Dryer is plugged into electrical outlet and is properly grounded.
- ☐ Dryer is leveled and is sitting firmly on the floor.
- ☐ Start your dryer to confirm that it runs, heats, and shuts off.

SDC1A809-02805J-05_EN_140507.indd Sec3:12 2014-05-07 □□ 6:29:45

DRAINING WATER WITHOUT USING THE WATER TANK

You can use the dryer without using the water tank by following the procedures below.

CONNECTING THE DRAIN HOSE

The Dryer can pump the condensed water outside of the DRYER directly with dain hose provide.
The procedures to connect the drain hose are as follows.

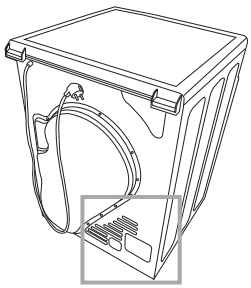

1. Disconnect the drain hose (A).

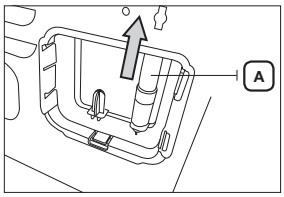

2. Connect the drain hose (A) to the other hole.

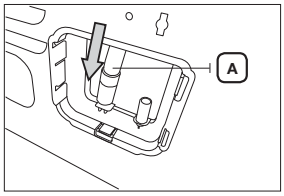

3. Connect accessory hose(long drain hose) (B) to the hole next to the hole that is connected to drain hose (A).

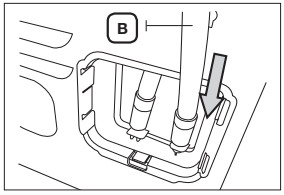

CAUTION

- When connecting hose (B), take care that the height of the hose does not exceed 90cm.
- After connecting the drain hose, you can directly drain the condensed water via the drain-outlet through the connected drain hose or through the washstand or the drain-outlet of the washstand.

SDC1A809-02805J-05_EN_140507.indd Sec3:13 2014-05-07 □□ 6:29:45

Connecting the drain hose

The end of the drain hose can be positioned in three ways:

1. Over the edge of a wash basin: The drain hose must be placed lower than 90cm. If the end of the drain hose needs to be placed above the ground, we recommend a height of 60cm ~ 90cm. To keep the drain hose spout bent, use the supplied plastic hose guide. Secure the guide to the wall with a hook or to the tap with a piece of string to prevent the drain hose from moving.

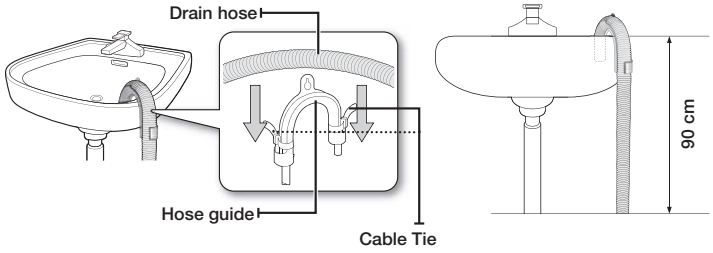

2. Assemble the drain hose and the hose guide and fix them with the cable-tie.
3. You can drain the condensed water by connecting the accessory hose (long drain hose) to the drain-outlet directly.

Connecting the direct-hose

You can immediately drain the condensed water that comes out while drying, by connecting the drain hose to the tap.

1. Assemble the hose connector and the hose.

CAUTION Since there is a danger of water leaking from the hose connecter and accessory hose, make sure that they are connected firmly.

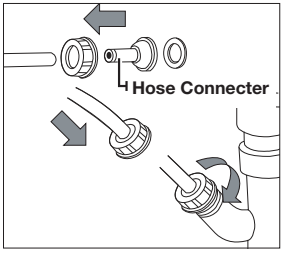

2. Connect the end of the hose to the tap.

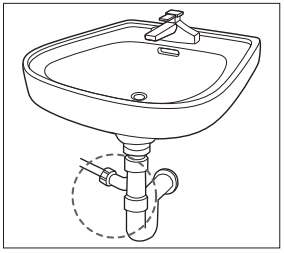

SDC1A809-02805J-05_EN_140507.indd Sec3:14 2014-05-07 □□ 6:29:45

INSTALLATION STACKING

In case of purchasing the additional stacking kit, contact our Samsung service center or local distributers. [Part no. SK-DH / SK-DA]

1. Carefully lay the dryer on its side. Use the packing material so you don't scratch the finish on the dryer.

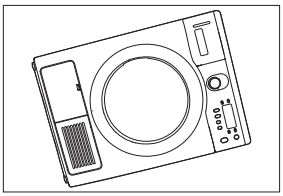

2. Install rubber pads to dryer base.

- Locate the 4 rubber pads in the parts package. Insert the rubber pads into the holes at the bottom of the levelling legs.
- Purchase the stacking-kit package additionally.

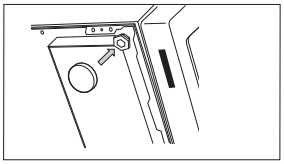

3. Set the dryer upright.

CAUTION The stacking kit can only be installed for Samsung family products.

4. Install bracket to dryer.

- Remove washer top cap screw from the rearleft. Align left bracket holes with top cap screw hole on rear left of the unit and replace screw.

Leave screw loose so dryer hole alignment will be easier.

- Repeat the above step with the right side.

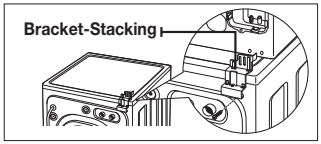

5. Install dryer and bracket on washer

WARNING

- Lift the dryer on top of the washer. Protect the washer control panel with cardboard or other protection. Be sure to lift the dryer high enough to clear the washer control panel.

Personal Injury. More than two people are recommended to lift the dryer into position because of its weight and size. Failure to do so could result in injury.

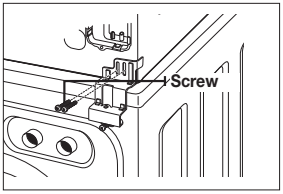

- Align the holes in the bracket with the holes in the back of the dryer.Using a Phillips screwdriver, attach the M4x12 tapping screws.
- Tighten the washer bracket screws ; then tighten all stacking kit screws.

6. Finalise the installation

WARNING

- Refer to the washer Installation Instructions to complete the washer installation.
- Refer to the dryer Installation Instructions to complete the dryer installation.
- Carefully slide or walk the stacked washer and dryer into place. Use felt pads or other sliding device to assist moving and to protect flooring.

Do not push on the dryer once installed to top of the washer. Pushing on the dryer may result in pinched fingers.

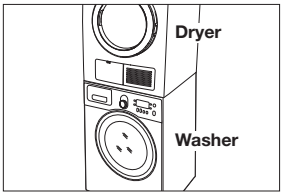

SDC1A809-02805J-05_EN_140507.indd Sec3:15 2014-05-07 6:29:45

DOOR REVERSAL

Depending on your requirements (installation location, space constraints), you can change the direction the door opens.

WARNING This is done according to the customer's needs. The qualified technician or customer can do this themselves directly.

1. Unplug the power cord.
2. Remove the two screws from the door-hinge.
3. Lift the door to separate it.

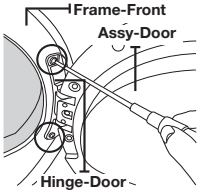

4. Remove the 16 screws.

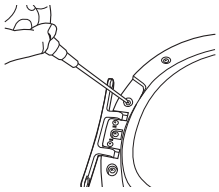

5. After removing the screw, rotate the holder-glass, the door-glass, and the cover-door (l) by 180˚ as shown in the figure.

CAUTION
- Since the holder-glass, the door-glass, and the cover-door (l) are not completely fixed, rotate them holding the lower part so that they are not separated.
- Work carefully so that the door-seal is not removed.

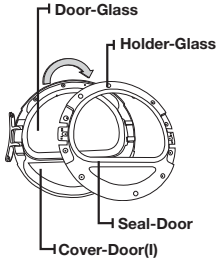

6. After rotating them by 180˚, hold them in the position as shown by the figure.

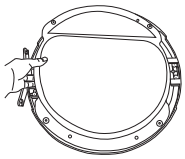

7. Assemble the glass-holder in the correct direction. (After the disassembly, assemble it by rotating it by 180˚.)

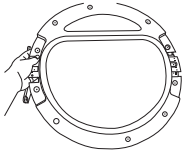

SDC1A809-02805J-05_EN_140507.indd Sec3:16 2014-05-07 □□ 6:29:46

8. Fasten the 16 screws in the correct positions.
9. Note that two of the screws have a different length from the others. (Use the longer screws for the door-lever.)

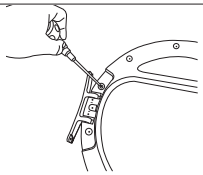

10. Move the position of the screw at the back of the door-hinge.

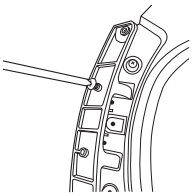

11. Fasten the screw in the bottom hole.

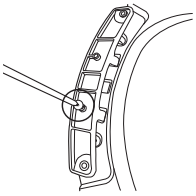

12. Remove the two screws holding the front-frame at the left.
13. Remove the two screws holding the holder-lever at the left.

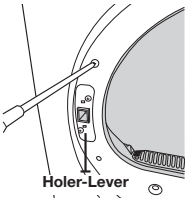

14. Now, move to the right side of the product and fasten the two screws holding the front-frame and the two screws holding the lever-holder.

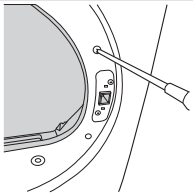

15. Align the door with the fixing holes.
16. Fasten the two screws holding the door-hinge.

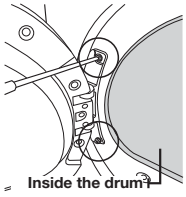

You can restore the direction the door opens by following the procedures above, if necessary.

SDC1A809-02805J-05_EN_140507.indd Sec3:17 2014-05-07 □□ 6:29:46

OVERVIEW OF THE CONTROL PANEL

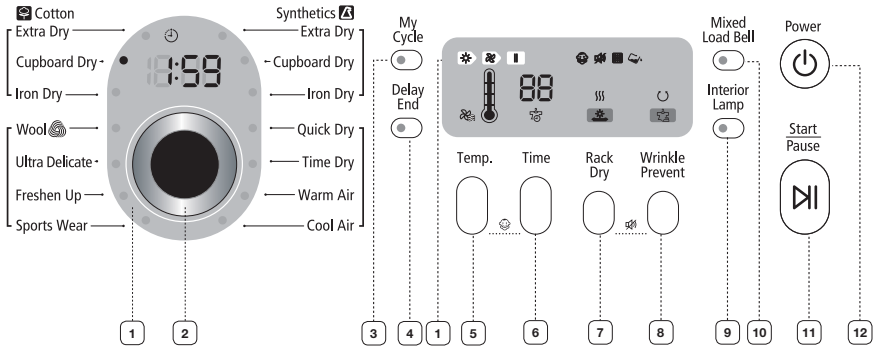

1 Digital Graphic Display	Displays the remaining drying cycle time, all cycle information, and error messages.
2 Cycle Selector	To select a cycle, rotate the Cycle Selector dial to the desired cycle. [Cottons] Cupboard Dry → Extra Dry → [Synthetics] Extra Dry → Cupboard Dry → Iron Dry → Quick Dry → Time Dry → Warm Air → Cool Air → Sports Wear → Freshen Up → Ultra Delicate → Wool → [Cotton] Iron → Cupboard Dry **Cotton** - For averagely or lightly soiled cottons, bed linen, table linen, underwear, towels, shirts, etc. • Extra Dry - Use for heavy-duty fabrics or items that should be very dry, such as jeans and towels. • Cupboard Dry - Use this cycle to dry loads such as cotton, underwear, and linen (NOT appropriate for jeans). • Iron Dry - Finishes the dry cycle in a moist state appropriate for Ironing. **Synthetics** - For averagely or lightly soiled blouses, shirts, etc., made of polyester (diolen, trevira), polyamide (perlon, nylon) or other similar blends. • Extra Dry - Use for heavy-duty fabrics or items that should be very dry, such as jeans and towels. • Cupboard Dry - Use this cycle to dry loads such as shirts, blouses, bed linen and table linen. (NOT appropriate for jeans). • Iron Dry - Finishes the dry cycle in a moist state appropriate for Ironing. **Quick Dry** - Provides a 29 minutes drying time and high temperature level is automatically selected. **Time Dry** - Time Dry allows you to select the desired cycle time and simultaneously it is possible to select the temperature level. Turn the cycle selector dial to Time Dry, then press **Time** Button to set the drying time. Press the **Time** button repeatedly to scroll through the time settings.The drying time increase in every 10 minutes up to 90 minutes. **Warm Air** - For small items, pre-dried laundry and normal fabrics using low temperature in 20 minutes. **Cool Air** - For all fabrics to need freshing tumbles without heating.

SDC1A809-02805J-05_EN_140507.indd Sec5:18 2014-05-07 □□ 6:29:46

	Wool - For machine washable and tumble dryable wool only. Load should be under 1.0 kg. The Wool cycle of this machine has been approved by Woolmark company for Total-Easy-Care Wool products, M1006 (Woolmark approval number). Wool mark available models : SDC1A809 **Ultra Delicate** - The Delicates cycle is designed For lingeries at a low drying temperature. **Freshen Up** - With this cycle the odors can be removed and especially this cycle freshens garments. **Sports Wear** - Use for water-proofed or proofed garments to keep their good looks and fresh feel (except Gore-Tax). For better drying results, turn the laundry inside out before drying it. Overloading the dryer may not yield the same results. For the Max Load of each drying course, refer to the Cycle Chart in the appendix.
3 **My Cycle Selection Button**	Choose your favorite cycle including cycle, temp, Drying level option, etc. (See page 21 for detail.)
4 **Delay End Selection Button**	Press this button repeatedly to cycle through the available Delay End options (from 4 hours to 19 hours in one hour increments). The hour displayed indicates the time when the dry cycle will be finished.
5 **Temp Selection Button**	Press this button repeatedly to cycle through the available temperature level for the drying.
6 **Time Selection Button**	When using Manual Dry cycles, time can be adjusted by pressing the Time Selection button. 20min→30min→40min→50min→60min→70min→80min→90min During the Sensory Dry cycle, the time indicator of manual is off because exact drying times are determined by fluctuating humidity levels.
7 **Rack Dry Selection Button**	Rack Dry is available only at time dry cycle. Temperature will be set only to Low. (page 22 for detail.)
8 **Wrinkle Prevent Selection Button**	Wrinkle Prevent provides approximately 60 minutes of intermittent tumbling in unheated air at the end of the cycle to reduce wrinkling. Press the **Wrinkle Prevent** button to activate this feature. The indicator light above the pad will illuminate when Wrinkle Prevent is selected. Dried laundry is prevented from becoming wrinkled by periodic drum rotations after the completion of the drying course. (Even after “End” is displayed, the drum rotates intermittently.)
9 **Interior Lamp Selection Button**	Lights the dryer drum while the dryer is running. It can be set while your dryer is not only running but also when it is stopped. If you do not turn the Drum Light off within 4 minutes of turning it on, it is automatically turned off.
10 **Mixed Load Bell Selection Button**	This is an alarm that notifies the user when the average drying level is damp dry (80% dried) when the laundry contains various types of materials and fabric. If the corresponding condition is satisfied, the Mixed load bell LED blinks.
11 **Start/Pause selection button**	Press to start a dry cycle. If the dryer is running, press it once and it will pause the dryer. Press it again to restart the dry cycle.
12 **Power button**	Press once to turn your dryer on, press again to turn it off. If your dryer is left on for more than 10 minutes without any buttons being touched, the power automatically turns off.

SDC1A809-02805J-05_EN_140507.indd Sec5:19 2014-05-07 □□ 6:29:46

CHILD LOCK

A function to prevent children from playing with your dryer.

Activating/Deactivatin

If you want to activating/deactivatin the Child Lock, press both the **Temp.** and **Time** buttons simultaneously for 3 seconds.

The "Child Lock" will be lit when this feature is activated.

- When the power is turned on, the Child Lock function is available.
- Once you set the Child Lock function, no button, except for the **Power** button, will respond until you release the Child Lock function.
- If the dryer is powered on again, the Child Lock function stays on.
- When other buttons, except for the **Power** button, do not respond, check the Child Lock indicator to see if the function is on.

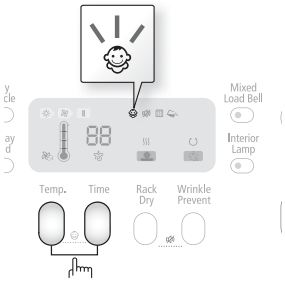

SIGNAL OFF

The Signal Off function can be selected during all courses. When this function is selected, sound is turned off for all courses. Even if the power is turned on and off repeatedly, the setting is retained.

Activating/Deactivatin

If you want to activate or deactivate the Signal Off function, press the **Rack Dry** and **Wrinkle Prevent** buttons at the same time for 3 seconds.

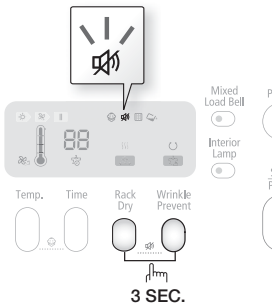

SDC1A809-02805J-05_EN_140507.indd Sec5:20 2014-05-07 □□ 6:29:46

MY CYCLE

Lets you activate your customised cycle that includes Dryness, drying temperature and time option.
By pushing the **My Cycl**e button, you activate the settings used during the previous My Cycle mode.
(Default : Normal Cycle)
If My Cycle mode is activated, the My Cycle indicator will be lit.
You can select all options in My Cycle mode as follows.

1. Select cycle using the Cycle Selector dial.
2. After cycle selection, set each option.

Each cycle has certain default options that are automatically set.
To see these default options, go to page 33.

3. Then, you can start My Cycle by pushing the **Start/Pause** button in My Cycle mode. The cycle and options you select will be displayed the next time you choose My Cycle.

You can change the My Cycle settings by repeating the same process above.
The last used setting will be displayed the next time you choose My Cycle.

DELAY END

You can set the dryer to finish your drying cycle automatically at a later time, choosing a delay of between 4 to 19 hours (in 1 hour increments). The hour displayed indicates the time at which the dry will be finished.

1. Manually or automatically set your drying machine according to the type of laundry you are drying.
2. Press the **Delay End** button repeatedly until the required delay time is set. If the delay time is set, the "Delay End" function becomes ON state.
3. Press the **Start/Pause** button. The "Delay End" indicator will blink and the clock will begin counting down until it reaches the set time.
4. To cancel a Delay End function, press the **Power** button and then turn the dryer on again.

INTERIOR LAMP

Lights the dryer drum while the dryer is running.

Setting & releasing

If you want to set or release the Interior Lamp, press both the **Interior Lamp** buttons simultaneously.

This can be set as long as the power cord is connected to the wall outlet. If you do not turn the Drum Light off within 5 minutes of turning it on, it is automatically turned off.

SDC1A809-02805J-05_EN_140507.indd Sec5:21 2014-05-07 6:29:47

RACK DRY

Installing the drying rack

1. Open the dryer door.
2. Position the drying rack in the tumbler, placing the front lip of the drying rack on the top of the lint filter case.
3. Place the rear legs in the two recessed areas of the dryer's back wall then push down the middle of the drying rack to fix.
4. Place the items to be dried on the rack, leaving space between them so air can circulate.
5. Close the dryer door.
6. Press the **Power** button.
7. Select Time Dry by using the cycle selector dial, set the time and then press the **Rack Dry** button.

- You can set a drying time up to 90 minutes. The temperature setting is automatically set to Low and cannot be changed. Select the time according to the moisture and weight of the items. Start dryer. It may be necessary to reset the timer if a longer drying time is needed.
- If do not select Time Dry cycle, Rack Dry function is not selected.

8. Press the **Start/Pause** button.

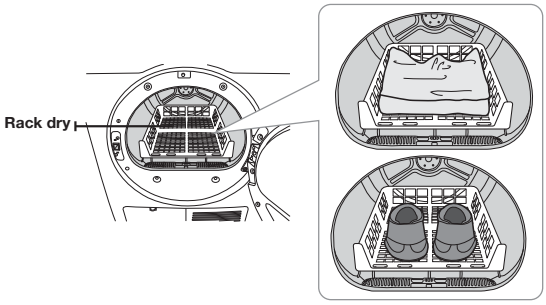

SUGGESTED ITEMS	REMARKS (MAX 1.5kg)
Washable sweaters (block to shape and lay flat on rack)	When drying the laundry using the Rack, fold and place the clothes on the Rack to prevent the clothing from becoming wrinkled.
Stuffed toys (cotton or polyester fiberfilled)	
Stuffed toys (foam or rubber-filled)	
Foam rubber pillows	
Sneakers	To dry sports shoes, place the shoes on the Rack so that the soles of the shoes are facing downwards.

WARNING Drying foam rubber, plastic, or rubber on a heat setting may cause damage to the items and lead to a fire hazard.

CAUTION Since damage may result when drying shoes, use the Rack Dry course to dry shoes.

SDC1A809-02805J-05_EN_140507.indd Sec5:22 2014-05-07 6:29:47

LOAD THE DRYER PROPERLY

- Place only one washload in your dryer at a time.
- Mixed loads of heavy and lightweight fabrics will dry differently, which may result in lightweight fabrics being dry while heavy fabrics remain damp at the end of a drying cycle.
- Add one or more similar items to your dryer when only one or two articles of clothing need drying. This improves the tumbling action and drying efficiency.
- Overloading restricts tumbling action, resulting in uneven drying as well as excessive wrinkling of some fabrics.
- Make sure to insert laundry that has been spun by an appropriate washing machine.
- No unwashed textiles should be dried
- Textiles which have been in contact with oil, alcohol, petrol etc. should not be dried.

GETTING STARTED

1. Load your dryer loosely – DO NOT overload.
2. Close the door.
3. Select the appropriate cycle and options for the load (see pages 20, 21).
4. Press the **Start/Pause** button.
5. The dryer indicator light will illuminate.
6. The estimated cycle time will appear in the display.
   The time may fluctuate to better indicate drying time remaining in the cycle.

- When the cycle is complete and “End” will appear in the display.
- Pressing Power cancels the cycle and stops your dryer.
- The Drying, Cooling, and Wrinkle Prevent indicator lights will illuminate during those portions of the cycle.

SDC1A809-02805J-05_EN_140507.indd Sec5:23 2014-05-07 □□ 6:29:47

care and cleaning

CLEAN THE FILTER CASE

- After each load.
- To shorten drying time.
- To operate more energy efficiently.

Do not operate your dryer without the filter case in place.

CAUTION There is a danger of damaging the laundry when drying laundry without the filter case.

CLEAN THE CONDENSER

- Clean once a month
- Clean with water

CAUTION If you do not clean it for a long time, the drying performance may be degraded.

CONTROL PANEL

Clean with a soft, damp clothes. Do not use abrasive substances.
Do not spray cleaners directly on the panel.
The control panel finish may be damaged by some laundry pre-treatment soil and stain remover products.
Apply such products away from your dryer and wipe up any spills or overspray immediately.

TUMBLER

Remove any stains such as crayon, ink, or fabric dye (from new items such as towels or jeans) with an all-purpose cleaner.
Tumble old towels or rags to remove any excess stain or cleaning substance.
Once these steps are followed, stains may still be visible, but should not transfer to subsequent loads.

STAINLESS STEEL TUMBLER

To clean the stainless steel tumbler, use a damp cloth with a mild, non-abrasive cleaner suitable for stainless steel surfaces.
Remove the cleaner residue and dry with a clean cloth.

DRYER EXTERIOR

The entire dryer has a high-gloss finish. Clean with a soft, damp cloth. Do not use abrasive substances.
Protect the surface from sharp objects as they may scratch or damage the finish.
Do not place any heavy or sharp objects or a detergent box on the dryer. Keep them on the purchased pedestal or in a separate storage box.

SDC1A809-02805J-05_EN_140507.indd Sec10:24 2014-05-07 □□ 6:29:47

DUMPING CONDENSED WATER

1. Pull the water-tank forwards to separate it.

CAUTION When removing the Water tank from the product, hold it using both hands as it is heavy and take care not to spill any water inside the tank.

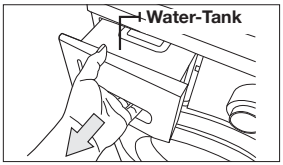

2. Remove the condensed water inside the water-tank.

- Remove the condensed water in the tank after every drying operation.

WARNING Since there is a danger of water leaking if you do not drain the water after using the product, make sure to drain the water.

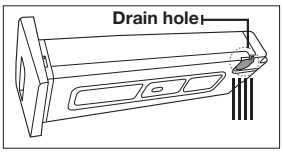

If you empty the water tank and press the Start button, the Water Tank Full ( ) in the LED panel is turned off.

CLEANING THE FILTER CASE

1. Open the door and remove the filter by pulling it upwards.

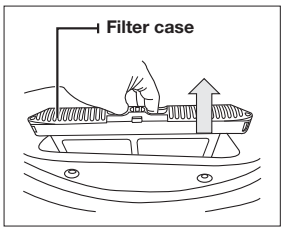

2. Open and clean the filter case.

- Clean the filter case after the drying operation is completed.

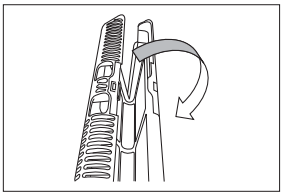

CAUTION
- Since the drying performance may be degraded and there is a danger of fire if you do not clean the filter case after the specified period of use, clean the filter case at the specified cleaning interval.
- Since the drying performance may be degraded and there is a danger of fire if you use a damaged or broken filter case, replace the filter case in this case.
- Clean the filter case after every drying operation.

- If the surface of the filter is wet, use the filter after drying it completely.
- If you clean the filter case and press the Start button, the Filter ( ) in the LED panel is turned off.

SDC1A809-02805J-05_EN_140507.indd Sec10:25 2014-05-07 6:29:47

CLEANING THE CONDENSER ASSEMBLY

1. Open the condenser compartment cover.

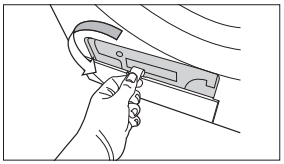

2. Unlock the fixer condenser.

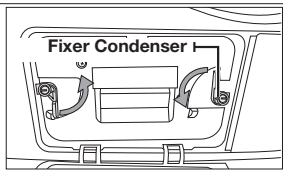

3. Remove the condenser.

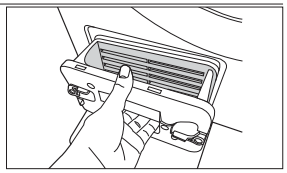

4. Clean the condenser completely under the tap letting water to flow through.

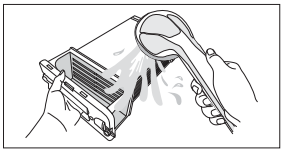

CAUTION

- Since the drying performance may be degraded if you do not clean the condenser after a specified period of use, clean the condenser at the specified cleaning interval.
- Clean it once a month.
- When assembling the condenser after cleaning it, make sure to that the fixer condenser is set to the lock position.

SDC1A809-02805J-05_EN_140507.indd Sec10:26 2014-05-07 □□ 6:29:48

SPECIAL LAUNDRY TIPS

Please follow the care label or manufacturer's instructions for drying special items. If care label instructions are not available, use the following information as a guide.

Bedspreads & Comforters	• Follow the care label instructions or dry on the Cotton cupboard and High temperature. • Make sure the item is thoroughly dry before using or storing. • May require repositioning to ensure even drying.
Blankets	• Use Cotton cupboard and dry only one blanket at a time for best tumbling action. • Make sure the item is thoroughly dry before using or storing.
Cloth Nappies	• Use the Cotton cupboard and the High temperature settings for soft,fluffy diapers.
Down–filled Items (jackets, sleeping bags, comforters, etc.)	• Use the Cotton cupboard and the Low or Low temperature setting. • Adding a couple of dry towels shortens drying time and absorbs moisture.
Foam Rubber (rug backs, stuffed toys, shoulder pads, etc.)	• DO NOT dry on a heat setting. Use the Cool Air cycle (no heat). • WARNING – Drying a rubber item with heat may damage it or be a fire hazard.
Pillows	• Use the Cotton cupboard. • Add a couple of dry towels to help the tumbling action and to fluff the item. • DO NOT dry kapok or foam pillows in dryer. Use the Cool Air cycle.
Plastics (shower curtains, outdoor furniture covers, etc.)	• Use the Cool Air cycle or the Time Dry cycle and the Low or Low temperature settings depending on the care label instructions.

THINGS TO AVOID :

- Fiberglass items (curtains, draperies, etc.).
- Woolens, unless recommended on the label.
- Vegetable or cooking oil-soaked items.

SDC1A809-02805J-05_EN_140507.indd Sec8:27 2014-05-07 □□ 6:29:48

troubleshooting

CHECK THESE POINTS IF YOUR DRYER...

PROBLEM	SOLUTION
Doesn't run.	• Make sure the door is latched shut. • Be sure the power cord is plugged into a live electrical outlet. • Check the home's circuit breaker and fuses. • Press the Start/Pause button again if the door is opened during the cycle. • Empty the water in the condensed water tank. • Clean the filter case.
Doesn't heat.	• Check the home's circuit breaker and fuses. • Select a heat setting other than Cool Air. • Check the case filter and condenser and clean them if necessary. • Dryer may have moved into the cool-down phase of the cycle.
Doesn't dry.	• Check all of the above, plus... • Do not overload. 1 wash load = 1 dryer load. • Sort heavy items from lightweight items. • Large, bulky items like blankets or comforters may require repositioning to ensure even drying. • Check that the dryer is draining properly to extract adequate water from the load. • Load may be too small to tumble properly. Add a few towels. • Clean the filter case. • Clean the Condenser. • Check if the cooling air vent is blocked.
Is noisy.	• Check the load for objects such as coins, loose buttons, nails, etc. Remove promptly. • Be sure the dryer is leveled properly as outlined in the installation instruction. • It is normal for the dryer to hum due to the high velocity of air moving through the dryer drum and fan.
Dries unevenly.	• Seams, pockets, and other similarly heavy areas may not be completely dry when the rest of the load has reached the selected dryness level. This is normal. Select the Extra Dry setting if desired. • If one heavy item is dried with a lightweight load, such as one towel with sheets, it is possible that the heavy item will not be completely dry when the rest of the load has reached the selected dryness level. Sort heavy items from lightweight items for best drying results.
Has an odour.	• Household odors from painting, varnishing, strong cleaners, etc. may enter the dryer with the surrounding room air. This is normal as the dryer draws the air from the room, heats it, pulls it through the tumbler, and exhausts it outside. • When these odors linger in the air, ventilate the room completely before using the dryer.
Shuts off before load is dry	• Dryer load is too small. Add more items or a few towels and restart the cycle. • Dryer load is too large. Remove some items and restart the dryer.

SDC1A809-02805J-05_EN_140507.indd Sec6:28 2014-05-07 □□ 6:29:48

PROBLEM	SOLUTION
Lint on clothes	• Make sure the lint filter is cleaned before every load. With some loads that produce high amounts of lint, it may be necessary to clean the filter case during the cycle. • Some fabrics are lint producers (for example, a fuzzy white cotton towel) and they should be dried separately from clothes that are lint trappers (for example, a pair of black linen pants) • Divide larger loads into smaller loads for drying • Check pockets thoroughly before drying and drying clothes.
Garments still wrinkled after Wrinkle prevent	• Small loads of 1 to 4 items work best. • Load fewer garments.Load similar-type garments.
Odours remain in clothing after Refresh.	• Fabrics containing strong odors should be washed.

SDC1A809-02805J-05_EN_140507.indd Sec6:29 2014-05-07 □□ 6:29:48

troubleshooting

INFORMATION CODES

Information codes may be displayed to help you better understand what is occurring with your Dryer.

ERROR DISPLAY	MEANING	SOLUTION
tE2	Clogged filter case is restricted.	Clean the filter case or condenser. If the problem continues call for service.
tE4		
dE	Running the dryer with door open	Close the door and then restart. If the problem continues call for service.
dF	Door is not closing properly	Call for service.
bE	Button stuck for more than 30 secs	Make sure a button is NOT being pressedcontinuously. Try restarting the cycle. If the problem continues, call for service.
hE	Clogged filter case is restricted. Invalid heating Temp when running the dryer.	Clean the filter case or condenser. If the problem continues call for service
Et	EEPROM is not communicating properly	Try restarting the cycle.If the problem continues call for service.
3E	The motor does not work properly.	Try restarting the cycle.If the problem continues call for service.
5E	The water tank is full of water. The drain pump is out of order.	Empty the water tank and start again. If the problem continues call for service.

For any codes not listed above, or if the suggested solution doesn't fix the problem, call your Samsung Service Centre or local Samsung dealer.

SDC1A809-02805J-05_EN_140507.indd Sec6:30 2014-05-07 □□ 6:29:48

FABRIC CARE CHART

The following symbols provide garment care direction. The Clothing care labels include symbols for drying, bleaching, drying and ironing, or dry cleaning when necessary. The use of symbols ensures consistency among garment manufacturers of domestic and imported items. Follow care label directions to maximize garment life and reduce laundering problems.

Wash Cycle		**Special Instructions**		**Warning Symbols for Laundering**	
	Normal		Line Dry/ Hang to Dry		Do Not Wash
	Permanent Press / Wrinkle Resistant / Wrinkle Control		Drip Dry		Do Not Wring
	Gentle/Delicates		Dry Flat		Do Not Bleach
	Hand Wash	**Heat Setting**			Do Not Tumble Dry
Water Temperature**			High		No Steam (added to iron)
●●●	Hot		Medium		Do Not Iron
●●	Warm		Low	**Dryclean**	
●	Cold		Any Heat		Dry Clean
Bleach			No Heat/Air		Do Not Dry Clean
	Any Bleach (when needed)	**Iron-Dry or Steam Temperatures**			Line Dry/ Hang to Dry
	Only Non-Chlorine (color-safe) Bleach (when needed)		High		Drip Dry
	Tumble Dry Cycle		Medium		Dry Flat
Normal			Low		
	Permanent Press/ Wrinkle Resistant/ Wrinkle Control				
	Gentle/ Delicates				

** The dot symbols represent appropriate wash water temperatures for various items. The temperature range for Hot is 41° – 52° C, for Warm 29° – 41° C and for Cold 16° – 29° C. (Wash water temperature must be a minimum of 16° C for detergent activation and effective cleaning.)

SDC1A809-02805J-05_EN_140507.indd Sec4:31 2014-05-07 □□ 6:29:48

appendix

PROTECTING THE ENVIRONMENT

This appliance is manufactured from recyclable materials. If you decide to dispose of this appliance, please observe local waste disposal regulations. Cut off the power cord so that the appliance cannot be connected to a power source. Remove the door so that animals and small children cannot get trapped inside the appliance.

DECLARATION OF CONFORMITY

This appliance complies with European safety standards, EC directive 93/68 and EN Standard 60335.

SPECIFICATIONS

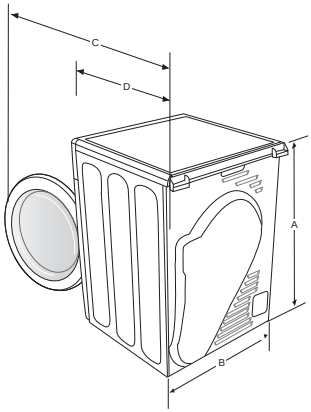

TYPE		FRONT LOADING DRYER
DIMENSIONS	**A. Height**	84.8 cm
	B. Width	59.8 cm
	C. Depth with door open 90°	108.6 cm
	D. Depth	63.4 cm
WEIGHT		44.5 kg
HEATER RATING		2500 W (1750 W+750 W)
POWER CONSUMPTION	**NO HEAT**	175 W
	HEATING	2675 W
He drum illumination		LED(Different according to model)

To replace the LED illumination please contact our service line.

SDC1A809-02805J-05_EN_140507.indd Sec4:32 2014-05-07 □□ 6:29:48

CYCLE CHART

(● user option)

Cycle		Max load(kg) (Dry Laundry)	Temp.	Time	Delay End	My Cycle	Mixed Load Bell	Interior Lamp	Wrinkle Prevent	Sound Off	Cooling Time (min)
Cotton	Extra Dry	8	High	134	●	●	●	●	●	●	5
	Cupboard Dry		High	119	●	●	●	●	●	●	5
	Iron Dry		High	99	●	●	-	●	●	●	5
Synthetics	Extra Dry	4	Medium	59	●	●	●	●	●	●	5
	Cupboard Dry		Medium	49	●	●	●	●	●	●	5
	Iron Dry		Medium	39	●	●	-	●	●	●	5
* Wool M1006(Woolmark approval number)		1	Low	27	●	●	-	●	●	●	1
Ultra Delicate		1	Low	35	●	●	●	●	●	●	3
Freshen Up		1.5	High	30	●	●	-	●	●	●	5
Sports Wear		1.5	Low	50	●	●	●	●	●	●	5
Quick Dry		-	High	29	●	●	-	●	●	●	8
Time Dry		-	High	40	●	●	-	●	●	●	8
Warm Air		-	Low	20	●	●	-	●	●	●	5
Cool Air		-	N/A	20	●	●	-	●	●	●	

* Depending on the percentage of wool in the laundry, the time may extend up to 43 minutes.

SDC1A809-02805J-05_EN_140507.indd Sec4:33 2014-05-07 □□ 6:29:48

appendix

CONSUMPTION DATA

Program	Load (kg)*	Final spin speed In a domestic washing machine (Rpm)	Ener (kWh)	Duration (Minutes)
Cotton Cupborad	8	1000 (60% residual moisture)** 1400 (50% residual moisture)	5.13 4.78	145 135
Cotton Iron	8	1000 (60% residual moisture)** 1400 (50% residual moisture)	4.53 3.94	105 96

1. * : Weight of dry laundry
** : EN 61121:2013 test program

2. All data without a “star” against it was calculated using EN 61121:2013

Consumption data can vary from the nominal values given above depending in the size of the load, types of textiles, residual moisture levels after spinning, fluctuations in the electricity supply and any extra options selected.

SDC1A809-02805J-05_EN_140507.indd Sec4:34 2014-05-07 □□ 6:29:48

SHEET OF HOUSEHOLD TUMBLE DRIERS

According to Regulation (EU) No. 392/2012

Samsung		
Model Name		SDC1A809 / SDC3K801
Capacity	kg	8
Type		Condenser
Energy Efficiency		
A + + + (highest efficiency) to D (least efficient)		C
Energy Consumption		
Annual Energy Consumption (AE_C)[1)]	kWh/yr	610
Automatic dryness detector		Yes
Energy consumption (E_dry) standard cotton programme at full load	kWh	5.13
Energy consumption (E_dry.1/2) standard cotton programme at partial load	kWh	2.76
off mode and left-on mode		
The power consumption off-mode (P_o) at full load	W	0.50
The power consumption in left-on mode (P_l) at full load	W	5.00
Duration of the left-on mode	min	10
Programme to which the information on the label and the Sheet relate[2)]		Cotton + Cupboard dry
Programme duration of the standard program		
Weighted Programme time standard cotton programme at full load and partial load	min	110
Programme Time (T_dry) standard cotton programme at full load	min	145
Programme Time (T_dry.1/2) standard cotton programme at partial load	min	84
condensation efficiency class		
A (most efficient) to G (least efficient)		C
Weighted condensation efficiency	%	71
Average condensation efficiency at full load	%	71
Average condensation efficiency at partial load	%	71
Airborne noise emissions		
Dry at full load	dB (A) re 1 pW	66
Name of company		Samsung Electronics Co., Ltd.

1. Energy consumption 610 kWh per year, based on 160 drying cycles of the standard cotton programme at full and partial load, and the consumption of the low-power modes. Actual energy consumption per cycle will depend on how the appliance is used.
2. 'standard cotton programme' used at full and partial load is the standard drying programme to which the information in the label and the fiche relates, that this programme is suitable for drying normal wet cotton laundry and that it is the most efficient programme in terms of energy consumption for cotton.

SDC1A809-02805J-05_EN_140507.indd Sec4:35 2014-05-07 □□ 6:29:48

QUESTIONS OR COMMENTS?

Country	CALL	OR VISIT US ONLINE AT
U.A.E	800-SAMSUNG (726-7864)	www.samsung.com/ae/support (English) www.samsung.com/ae_ar/support (Arabic)

DC68-02805J-05

SDC1A809-02805J-05_EN_140507.indd Sec4:36 2014-05-07 □□ 6:29:48

SDC1A809
SDC3K801

مجفف يعمل بالتكثيف

دليل المستخدم

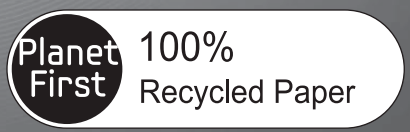

تم إنتاج هذا الدليل باستخدام ورق معاد تدويره بنسبة 100%.

إمكانات هائلة

نشكرك على شراء هذا المنتج من Samsung.

SAMSUNG

CE

المحتويات

تركيب المجفف ٩

٩ الأدوات اللازمة للتركيب
٩ نظرة حول السطح الخارجي للمجفف
١٠ الفحص قبل التركيب
١٠ إجراءات ما قبل استخدام المنتج
١٠ تعليمات هامة للتركيب
١٠ الاعتبارات المكانية
١٠ تركيب القنطرة أو الخزانة
١١ المتطلبات الكهربية
١١ التوصيل بالأرضي
١٢ التركيب جانب بجانب
١٢ قائمة اختيار التركيب النهائية
١٣ تصريف الماء بدون استخدام خزان الماء
١٣ توصيل خرطوم التصريف
١٥ تثبيت التركيب
١٦ عكس الباب

إرشادات التشغيل، تلميحات ١٨

١٨ نظرة عامة على لوحة التحكم
٢٠ التأمين ضد عبث الأطفال
٢٠ إيقاف التنبيه
٢١ الدورة المفضلة
٢١ تأجيل التوقف
٢١ المصباح الداخلي
٢٢ رف التجفيف
٢٣ وضع الملابس في المجفف بشكل سليم
٢٣ بدء الاستخدام

العناية والتنظيف ٢٤

٢٤ تنظيف حاوية المصفاة
٢٤ تنظيف المكثف
٢٤ لوحة التحكم
٢٤ المجفف الدوار
٢٤ مجفف دوار صلب لا يصدأ
٢٤ الأسطح الخارجية للمجفف
٢٥ ضخ الماء المتكثف (🔄)
٢٥ تنظيف حاوية المصفاة
٢٦ تنظيف مجمع المكثف

تلميحات خاصة حول الغسيل ٢٧

٢٧ تلميحات خاصة حول الغسيل

استكشاف المشاكل وحلها ٢٨

٢٨ تحقق مما يلي إذا كان المجفف...
٣٠ رموز المعلومات

الملحق ٣١

٣١ جدول العناية بالأقمشة
٣٢ حماية البيئة
٣٢ بيان التوافق
٣٢ المواصفات
٣٣ جدول الدورات
٣٤ بيانات الاستهلاك
٣٥ بيان المجففات الدوارة المنزلية

SDC1A809-02805J-05_AR_140507.indd Sec2:2 2014-05-07 6:30:49

معلومات السلامة

تهانينا على شرائك "مجفف Samsung" الجديد. يحتوى هذا الدليل على معلومات هامة حول عملية تركيب الجهاز واستخدامه والعناية به. الرجاء قراءة هذا الدليل بعناية لتتمكن من الاستفادة الكاملة من الميزات والفوائد العديدة للمجفف.

تحذير - خطر حدوث حريق

- يجب تنفيذ تركيب مجفف الملابس بواسطة فني مؤهل.
- ويكون تركيب مجفف الملابس وفقًا لتعليمات الشركة المصنعة والضوابط المحلية.
- للتقليل من خطر حدوث إصابات خطيرة أو التسبب في الوفاة، اتبع كافة تعليمات التركيب.

ما يجب أن تعرفه حول إرشادات السلامة

لا تغطي التحذيرات وإرشادات السلامة الهامة الواردة في هذا الدليل كافة الظروف والمواقف المحتمل حدوثها. لذا يقع على عاتقك مسؤولية اتباع المنطق السليم والتعامل بحذر ومراعاة الانتباه عند تركيب المجفف وصيانته وتشغيله.
للاستفسار حول المشاكل والظروف التي لا تستوعبها، اتصل بالشركة المصنّعة للجهاز.

الرموز والاحتياطات الهامة للسلامة

تحذير	الممارسات الخطيرة أو غير الآمنة التي قد تؤدي **إلى إصابات جسدية بالغة أو الوفاة**.
تنبيه	الممارسات الخطيرة أو غير الآمنة التي قد تؤدي **إلى إصابات طفيفة للأفراد أو تلف المجفف**.
تنبيه	لتقليل احتمال حدوث خطر الحريق أو الانفجار أو الصدمات الكهربية أو الإصابة الجسدية أثناء استخدام الغسالة، اتبع احتياطات السلامة الأساسية التالية:

	ممنوع المحاولة.
	ممنوع الفك.
	ممنوع اللمس.
	اتبع الإرشادات بعناية.
	قم بفصل قابس التيار الكهربي من مقبس الحائط.
	تأكد من توصيل الغسالة بأرضي لمنع حدوث صدمة كهربية.
	اتصل بمركز الخدمة للمساعدة.
	ملاحظة
	اقرأ دليل التشغيل

SDC1A809-02805J-05_AR_140507.indd Sec1:3 2014-05-07 6:30:49

معلومات السلامة

⚠ لتقليل احتمالات نشوب حريق أو التعرض لصدمة كهربية أو حدوث إصابات جسدية أثناء استخدام الجهاز، اتّبع احتياطات السلامة الأساسية التالية:

لا تترك الأطفال (أو الحيوانات الأليفة) يلعبون داخل الغسالة أو فوقها؛ حيث يصعب فتح باب الغسالة من الداخل، وقد يتعرض الأطفال لإصابات بالغة الخطورة في حالة احتباسهم بداخلها.

يجب عدم استخدام هذا الجهاز من قبل ذوي الإعاقات البدنية أو الحسية أو العقلية أو من تنقصهم المعرفة والخبرة (بما في ذلك الأطفال)، إلا إذا كانوا تحت إشراف شخص يوفر لهم إرشادات استخدام الجهاز ويكون مسؤولاً عن سلامتهم.

تجب مراقبة الأطفال لضمان عدم عبثهم بالجهاز.

بالنسبة للاستخدام في أوروبا: يمكن أن يستخدم هذا الجهاز الأطفال الذين تبدأ أعمارهم من ٨ سنوات فيما أكثر، بالإضافة إلى الأشخاص ممن لديهم قدرات عضلية أو حسية أو عقلية محدودة أو أولئك الذين تنقصهم الخبرة والمعرفة إذا كانوا تحت الإشراف أو واعين بالإرشادات التي تتعلق باستخدام الجهاز بطريقة آمنة وفهم المخاطر المتضمنة في عملية الاستخدام.
ويجب ألا يتم السماح للأطفال بالعبث بالجهاز. كما يجب عدم السماح للأطفال بالتنظيف أو الصيانة التي يقوم بها المستخدم دون إشراف.

في حالة تلف سلك التيار الكهربي، يجب تغييره من قبل الشركة المصنِّعة أو وكيل الصيانة الخاص بها أو أي فني مؤهل لتجنب التعرض لأي خطر.

يجب وضع الجهاز بحيث يسهل الوصول إلى قابس التيار الكهربي وصنابير توريد الماء وأنابيب تصريف الماء.

بالنسبة للأجهزة التي تحتوي على فتحات تهوية بقاعدتها، يجب تجنب سد السجاد لهذه الفتحات.

يجب استخدام مجموعات الخراطيم الجديدة المرفقة بالغسالة وعدم استخدام مجموعات الخراطيم القديمة مرة أخرى.

تنبيه: لتجنب وجود خطر بسبب إعادة الضبط غير المقصود للقاطع الحراري، يجب ألا يتم توريد هذا الجهاز بالطاقة من خلال جهاز فصل ووصل خارجي -مثل المؤقت- أو توصيله بدائرة كهربائية يتم تشغيلها وإيقاف تشغيلها بصورة منتظمة من قبل مرفق الخدمة العامة.

SDC1A809-02805J-05_AR_140507.indd Sec1:4 2014-05-07 6:30:49

لا تستخدم المجفف بالدوار في حالة استخدام مواد كيميائية للتنظيف.

يجب تنظيف مصفاة النسالات بصورة متكررة، إذا أمكن.

لا تسمح بتراكم نسالات حول المجفف الدوار. (لا ينطبق ذلك على الأجهزة المصممة لتكون تهويتها خارج المبنى)

يجب توفير تهوية كافية لتجنب تسرب الغازات إلى الغرفة من الأجهزة التي تستخدم أنواعًا أخرى من الوقود، بما في ذلك النيران المباشرة.

تجنب تجفيف الملابس غير المغسولة داخل المجفف الدوار.

يجب غسل الملابس المتسخة بمواد مثل زيت الطهي والأسيتون والكحول والبنزين والكيروسين ومزيلات البقع وزيت التربنتين والشمع ومزيلات الشمع، بماء ساخن مع إضافة كمية إضافية من مسحوق الغسيل قبل تجفيفها في المجفف الدوار.

يجب عدم تجفيف أشياء مثل المطاط الإسفنجي (مطاط لاتكس) أو أغطية الرأس الخاصة بالحمام أو الأقمشة والملابس المقاومة للماء أو الأشياء المدعومة بالمطاط أو الوسائد المحشوة بالمطاط الإسفنجي باستخدام المجفف الدوار.

ويجب استخدام منعمات الأقمشة أو المنتجات المشابهة وفقًا لإرشادات استخدام منعمات الأقمشة.

تتم المرحلة النهائية من دورة المجفف الدوار دون تسخين (دورة التجفيف البارد) لضمان ترك الملابس بدرجة حرارة تضمن عدم تعرضها للتلف.

قم بتفريغ الجيوب من جميع الأشياء التي قد تكون موجودة بها مثل الولاعات وأعواد الثقاب.

تحذير: لا تقم أبدًا بإيقاف المجفف الدوار قبل انتهاء دورة التجفيف ما لم يتم إخراج الغسيل بالكامل وتوزيعه بسرعة حتى تتبدد الحرارة.

يجب عدم تفريغ هواء العادم من خلال مصرف الهواء الذي يتم استخدامه لخروج العادم من الأجهزة التي تستخدم الغاز أو أنواعًا أخرى من الوقود.

يجب عدم تركيب الجهاز خلف باب قابل للغلق أو باب منزلق أو باب بمفصلة توجد على الجهة المقابلة لجهة المجفف الدوار؛ حيث يعوق ذلك فتح باب المجفف الدوار بشكل كامل.

SDC1A809-02805J-05_AR_140507.indd Sec1:5 2014-05-07 6:30:49

معلومات السلامة

علامات التحذير الصارمة الخاصة بالتركيب

تحذير

يجب تركيب هذا الجهاز بواسطة فني متخصص أو شركة صيانة متخصصة.

- قد ينتج عن الفشل في اتباع هذه التعليمات حدوث صدمة كهربية أو حريق أو انفجار أو مشاكل تتعلق بالمنتج أو التعرض للإصابة.

قم بتوصيل سلك التيار الكهربي في مقبس حائط بجهد تيار متردد ٢٢٠~٢٤٠ فولت وتردد ٥٠ هرتز وشدة تيار من التيار المتردد أو أعلى واستخدم هذا المقبس لتشغيل هذا الجهاز فقط. بالإضافة إلى ذلك يجب عدم استخدام سلك تمديد.

- قد تؤدي مشاركة مقبس الحائط مع أجهزة أخرى باستخدام مشترك كهرباء أو مد سلك التيار الكهربي إلى حدوث صدمة كهربية أو نشوب حريق.
- تأكد من تتطابق كل من الجهد الكهربي والتردد والتيار مع القياسات الخاصة بمواصفات المنتج. يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو نشوب حريق. وكذلك الفشل في إدخال قابس التيار الكهربي في مقبس الحائط بإحكام.

قم بإزالة أي مواد غريبة، مثل الأتربة أو الماء من النهايات الطرفية لقابس التيار الكهربي ونقاط الاتصال باستخدام قطعة قماش جافة بانتظام.

- افصل قابس التيار الكهربي ونظفه باستخدام قطعة قماش جافة.
- يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو نشوب حريق.

احتفظ بجميع مواد التعبئة والتغليف بعيدة تمامًا عن متناول الأطفال، نظرًا لأنها قد تمثل خطورة على الأطفال.

- قد يؤدي وضع الطفل لكيس من أكياس التغليف فوق رأسه إلى إصابته بالاختناق.

يجب توصيل الجهاز بالأرضي بشكل سليم.
ولا تقم بتوصيل الجهاز بالأرضي بالقرب من أنبوب غاز أو أنبوب ماء بلاستيكي أو سلك تليفون.

- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق أو انفجار أو مشاكل بالمنتج
- يجب عدم توصيل سلك التيار الكهربي بمأخذ لم يتم توصيله بأرضي بشكل صحيح. وتأكد من أن ذلك يتم وفقًا للقواعد المحلية والقومية.

لا تقم بتركيب الجهاز أو حفظه بحيث يكون معرضًا للعوامل الخارجية.

لا تستخدم قابس تيار كهربي أو سلك تيار كهربي تالف أو مقبس حائط غير مُحكم.

- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق.

في حالة تلف قابس الجهاز (سلك التيار الكهربي)، يجب تغييره من قبل الشركة المصنِّعة أو وكيل الصيانة الخاص بها أو أي فني مؤهل لتجنب التعرض لأي خطر.

يجب عدم جذب سلك التيار الكهربي أو ثنيه بقوة.
يجب عدم لف سلك الطاقة أو طيه.
يجب عدم تعليق سلك الطاقة فوق شيء معدني أو وضع شيء ثقيل فوق سلك التيار الكهربي أو تمرير سلك التيار الكهربي بين أشياء أو دفع سلك التيار الكهربي في المساحة الموجودة خلف الجهاز.

- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق.

يجب عدم جذب سلك الطاقة عند فصل قابس التيار الكهربي.

- يجب فصل قابس التيار الكهربي عن طريق الإمساك بالقابس.
- يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو نشوب حريق.

يجب توصيل الجهاز بأرضي بشكل سليم. ويجب عدم توصيل سلك التيار الكهربي بمقبس متصل بأرضي بشكل غير ملائم وغير متطابق مع القواعد المحلية والقومية. راجع إرشادات التركيب الخاصة بتوصيل هذا الجهاز بالأرضي.

SDC1A809-02805J-05_AR_140507.indd Sec1:6 2014-05-07 6:30:49

علامات التحذير الصارمة الخاصة بالاستخدام

تحذير

لا تضع الأطفال أو الحيوانات الأليفة فوق المنتج أو بداخله. بالإضافة إلى ذلك، قم بفك قفل الباب (ذراع الإطلاق) عند التخلص من المنتج.

- قد يتسبب هذا الأمر في سقوط الأطفال أو إصابتهم.
- في حالة احتباس الأطفال داخل المنتج، فقد يتعرضوا للاختناق.

لا تحاول الوصول إلى ما بداخل المنتج أثناء دوران الحاوية.

لا تحاول الجلوس فوق المنتج أو الاتكاء على الباب.

- قد يتسبب هذا الأمر في انقلاب المنتج والتعرض للإصابة.

جفف الغسيل بعد تجفيفه بواسطة غسالة مناسبة فقط.

تجنب تجفيف الملابس غير المغسولة داخل المجفف الدوار.

لا تشرب الماء المتكثف.

لا تقم أبدًا بإيقاف المجفف الدوار قبل انتهاء دورة التجفيف ما لم تتم إزالة الغسيل بالكامل وتوزيعه بسرعة حتى تتبدد الحرارة.

يجب عدم تجفف الغسيل الملوث بمواد قابلة للاشتعال مثل الجاز أو الكيروسين أو البنزين أو الثنر أو الكحول أو ما إلى ذلك.

- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق أو انفجار.

لا تدع الحيوانات الأليفة تمضغ الغسالة أو تعبث بها.

- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو حدوث إصابة.

عند التخلص من المنتج، قم بفصل الباب وفك سلك التيار الكهربي قبل التخلص منه.

- قد يؤدي عدم الالتزام بهذه التعليمات إلى تلف سلك التيار الكهربي أو حدوث إصابة.

لا تلمس قابس التيار الكهربي ويديك مُبتلة.

- قد ينتج عن هذا الأمر الإصابة بصدمة كهربية.

لا تقم بإصلاح أي قطعة من الجهاز أو استبدالها أو محاولة صيانتها ما لم يكن موصى بذلك في إرشادات الإصلاح. كما ينبغي أن تكون لديك المهارات اللازمة لصيانة هذا الجهاز.

لا تحاول إصلاح الجهاز أو فكه أو تعديله بنفسك.

- يجب عدم استخدام أي منصهر (مثل النحاس أو سلك معدني، وما إلى ذلك) خلاف المنصهر القياسي.
- عند الحاجة إلى إصلاح الجهاز أو إعادة تركيبه، اتصل بأقرب مركز صيانة.
- قد ينتج عن الفشل في اتباع هذه التعليمات حدوث صدمة كهربية أو نشوب حريق أو مشاكل تتعلق بالمنتج أو التعرض للإصابة.

تم تصميم المنتج الذي قمت بشرائه للاستخدام المنزلي فقط.

يُعد استخدام المنتج لأغراض العمل سوء استخدام له. وفي هذه الحالة، لا يتم تغطية المنتج من قبل الضمان الأساسي الذي تقدمه شركة Samsung. كما أن شركة Samsung لا تتحمل أية مسئولية عن الأعطال أو الخسائر التي تنجم عن سوء الاستخدام.

SDC1A809-02805J-05_AR_140507.indd Sec1:7 2014-05-07 6:30:49

معلومات السلامة

علامات التنبيه الخاصة بالاستخدام

تنبيه

يجب عدم الوقوف فوق الجهاز أو وضع أشياء فوقه (مثل ملابس الغسيل أو الشمعدان المُضاء أو السجائر المشتعلة أو الأطباق أو المواد الكيماوية أو الأشياء المعدنية، وما إلى ذلك).

- قد ينتج عن هذا الأمر الإصابة بصدمة كهربية أو حدوث حريق أو مشاكل بالمنتج أو وقوع إصابات.

لا تقم بلمس الباب الزجاجي أو ما بداخل الحاوية أثناء التجفيف أو بعده مباشرة نظرًا لسخونته.

- قد ينتج عن هذا الأمر الإصابة بحروق.

يجب عدم الضغط على الأزرار باستخدام أدوات حادة مثل المسامير أو السكاكين أو الأظافر، وما إلى ذلك.

- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو حدوث إصابة.

يجب عدم استخدام سائل التنظيف بشكل مباشر. كما يجب عدم غسل ملابس الغسيل أو شطفها أو تنشيفها في حالة تعلق مسحوق جاف للتنظيف بها.

- قد يؤدي هذا الأمر إلى حدوث اشتعال فوري نتيجة للحرارة الناجّة عن تأكسد الزيت.

يحظر تجفيف الغسيل الذي يحتوي على مواد مطاطية (لاتكس) أو أقمشة مشابهة للمطاطية.

- عند ارتفاع درجة حرارة المواد المطاطية، فقد تبدأ في الاشتعال.

لا تقم بتجفيف الملابس الملوثة بزيت نباتي أو زيت طعام نظرًا لتعثر إزالة كمية الزيت الكبيرة أثناء غسل الملابس. وبالإضافة إلى ذلك، قم باستخدام دورة Cool Down (التجفيف البارد) حتى لا ترتفع حرارة الغسيل.

- قد تتسبب حرارة أكسدة الزيت في نشوب حريق.

تأكد من إفراغ كافة جيوب الملابس التي سيتم غسلها.

- قد تتسبب الأشياء الصلبة والحادة مثل العملات المعدنية أو الدبابيس أو المسامير أو المسامير القلاووظ أو الأحجار في إحداث أضرار بالغة بالجهاز.

يجب عدم غسل الملابس المزودة بإيزمات أو أزرار كبيرة الحجم أو الأشياء المعدنية الأخرى ثقيلة الوزن.

لا تستخدم منعم أقمشة أو مزيل كهربائي ثابت ما لم يكن معتمد من قَبل الشركة المصنَّعة.

- قد يتسبب هذا الأمر في تلف الغسيل.

لا تستخدم المجفف بالقرب من المساحيق الخطيرة مثل تراب الفحم أو دقيق القمح أو ما إلى ذلك.

- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق أو انفجار.

لا تضع المواد القابلة للاشتعال بالقرب من المنتج.

- قد يتسبب هذا الأمر في انبعاث غازات سامة من المنتج أو تلف أجزائه أو حدوث صدمة كهربية أو نشوب حريق أو انفجار.
- ينبغي عدم وضع الجهاز خلف الأبواب القابلة للغلق أو ما إلى ذلك.

علامات التحذير الصارمة الخاصة بالتنظيف

خطير

يجب عدم تنظيف الجهاز عن طريق رش الماء فوقه مباشرةً.
يجب عدم استخدام البنزين أو الثنر أو الكحول لتنظيف الجهاز.

- قد ينتج عن هذا الأمر تغيير في اللون أو تشويه أو تلف أو حدوث صدمة كهربية أو نشوب حريق.

افصل قابس الجهاز من مقبس الحائط قبل تنظيفه أو صيانته.

- يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو نشوب حريق.

قم بتنظيف حاوية المصفاة قبل استخدام المجفف وبعد استخدامه.

نظف الأجزاء الداخلية للمنتج بانتظام عن طريق طلب المساعدة من مهندس صيانة معتمد.

قم بتنظيف المكثف بالماء مرة واحدة شهريًا.

يجب تنظيف الأجزاء الداخلية للمجفف بشكل دوري بواسطة فني صيانة متخصص.

SDC1A809-02805J-05_AR_140507.indd Sec1:8 2014-05-07 6:30:49

تركيب المجفف

الأدوات اللازمة للتركيب

استعن بفني محترف لتركيب هذا المجفف بشكل صحيح. في حالة إجراء اتصال بمركز صيانة بسبب سوء التركيب أو الضبط أو التوصيل، يتحمل الفني الذي قام بتركيب المنتج المسئولية. أما إذا قمت بتركيب المجفف بنفسك، فستتحمل تلك المسئولية.
تأكد من توفر كافة المستلزمات الضرورية للتركيب بشكل صحيح (جهد تيار متردد ٢٢٠~٢٤٠ فولت وتردد ٥٠ هرتز وشدة تيار).

١. يجب توفر مخرج تيار كهربي متصل بأرضي. قم بالاطلاع على "المتطلبات الكهربية" (راجع صفحة ١١).
٢. نظام تكثيف - يقوم بتكثيف الهواء وتوليده بالإضافة إلى توزيع الهواء الساخن والرطب داخليًا باستخدام مكثف حرارة داخلي.

نظرة حول السطح الخارجي للمجفف

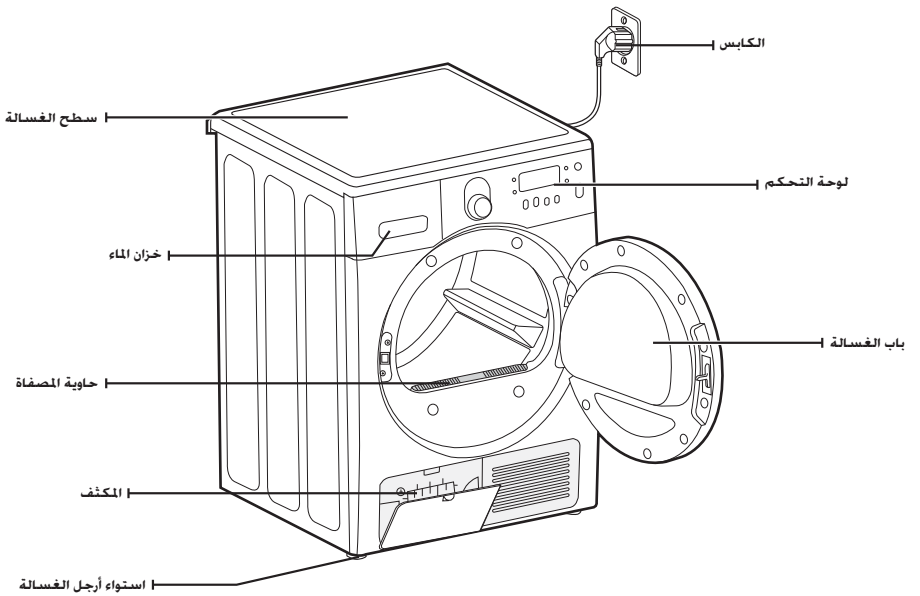

الأجزاء

حامل الخرطوم

رابط الكبل


موصل الخرطوم

خرطوم تصريف طويل (٢ م)

دليل إرشادات

SDC1A809-02805J-05_AR_140507.indd Sec3:9 2014-05-07 6:30:49

تركيب المجفف

الفحص قبل التركيب

- لا تقم بتوصيل سلك التيار الكهربي بمقبس الحائط قبل اكتمال تركيب المجفف.
- افحص المظهر الخارجي للمنتج للتحقق من أي أجزاء تالفة قبل البدء في تركيب المنتج.
- في حالة وجود أي أجزاء تالفة، الرجاء الاتصال بأقرب "مركز خدمة عملاء" لشركة Samsung.
- عند نقل المنتج، لا تقم بنقله بنفسك.
- يجب توخي الحذر لأن حواف المجفف قد تكون حادة.
- لا تقم بتركيب المجفف في مكان معرض للتجمد. قد يتسبب الماء البارد في تلف المنتج.
- استخدم المنتج في المنزل فقط.
- لا تقم بوضع المجفف على إحدى جانبيه عند حمله، ولا تقم بنقله بطريقه تسبب اهتزاز للأجزاء الداخلية. قد ينتج عن هذا الأمر تلف الأجزاء الداخلية للمنتج.

إجراءات ما قبل استخدام المنتج

- تحقق من وجود أي ملحقات متبقية داخل الحاوية.
- قم بتوصيل سلك التيار الكهربي قبل تشغيل المنتج.
- لا تغلق فتحة مدخل الهواء الخاصة بشبكة التبريد الموجود على اللوحة الأمامية للمجفف.
- لا تضع أشياء قابلة للاشتعال بالقرب من المجفف وحافظ دائمًا على نظافة الأشياء المحيطة.
- اجعل مستوى المجفف مساويًا للأرض.
- لا تنزع أرجل المجفف القابلة للضبط، نظرًا لأنها ضرورية للحفاظ على مستوى المنتج في نفس مستوى الأرض.

تعليمات هامة للتركيب

الرجاء قراءة الإرشادات التالية بعناية قبل تركيب المجفف. يجب الحفاظ على هذه الإرشادات للرجوع إليها في المستقبل.

⚠ قم بإزالة الأبواب من جميع الأجهزة المهملة لتجنب خطر تعرض الأطفال للاختناق.
خطير

الاعتبارات المكانية

لا يتطلب الأمر وجود جهاز تهويه خارجي نظرًا لاختيار نوع مكثف يقوم بتكثيف الهواء وتوزيعه داخل المجفف.
لذلك يمكن تركيب المجفف واستخدامه في أي مكان تكون فيه درجة الحرارة بين ٥ و ٣٥ درجة مئوية. بخلاف المجفف التقليدي الذي يتطلب نظام خارجي للتخلص من العوادم.

تركيب القنطرة أو الخزانة

لتشغيل المجفف بشكل آمن وسليم، يجب توفير الحد الأدنى من الفراغات حولها كما يلي:

الجوانب - ٢٥ مم　　الجزء الخلفي - ٥١ مم

الجزء العلوي -٢٥ مم　　الجزء الأمامي - ٤٦٥ مم

في حالة تركيب الغسالة والمجفف معًا، يجب أن يحتوي الجزء الأمامي للقنطرة أو الخزانة على فتحة هواء غير مسدودة ٤٦٥ مم على الأقل.

SDC1A809-02805J-05_AR_140507.indd Sec3:10　　2014-05-07　6:30:49

المتطلبات الكهربية

المتطلبات الكهربية هي جهد تيار متردد ٢٢٠~٢٤٠ فولت وتردد ٥٠ هرتز وشدة تيار.

- قد يؤدي التوصيل غير الصحيح للموصل الأرضي للجهاز إلى خطورة حدوث صدمة كهربية.
  استعن بفني كهرباء متخصص أو فني صيانة إذا كان لديك شك حول توصيل الأرضي للمجفف بطريقة صحيحة. لا تقم بتعديل القابس المتوفر مع المجفف - وإذا كان لا يتلاءم مع مخرج التيار، يفضل تركيب مخرج تيار مناسب بواسطة فني متخصص.
  تنبيه

- لتفادي خطر نشوب حريق أو التعرض لصدمة كهربية أو حدوث إصابات شخصية غير ضرورية، يجب أن تتم عملية توصيل الأسلاك والتوصيل بالأرضي وفقًا للقواعد المحلية. وفي حالة عدم توفر القواعد المحلية، فإن الأمر يقع على عاتقك لتقوم بتوفير الخدمات الكهربية الملائمة للمجفف.

التوصيل بالأرضي

يجب أن يتم توصيل المجفف بالأرضي. وفي حالة حدوث خلل أو تعطل في الأداء، يعمل التوصيل بالأرضي على تقليل خطورة التعرض لصدمة كهربية، وذلك بتوفير مسار أقل مقاومة للتيار الكهربي.
يتم تزويد الغسالة بقابس تيار كهربي أرضي بثلاثة سنون لاستخدامه بشكل صحيح في المخرج الأرضي المُركب بشكل صحيح.

لا تقم مطلقًا بتوصيل السلك الأرضي بخطوط مواسير السباكة البلاستيكية أو خطوط الغاز أو مواسير الماء الساخن.

فقد يؤدي التوصيل غير الصحيح للموصل الأرضي إلى حدوث صدمة كهربية.
استشر فني كهرباء متخصص أو فني صيانة إذا كنت غير متأكد من صحة التوصيل الأرضي للمجفف. يُحظر تعديل القابس المرفق مع المجفف. وفي حالة عدم توافقه مع مخرَج التيار، استعن بفني كهرباء متخصص لتركيب مخرَج مناسب.

قد يتسبب عدم توصيل المجفف بالأرضي إلى خطورة نشوب حريق أو صدمة كهربائية.
تنبيه

SDC1A809-02805J-05_AR_140507.indd Sec3:11 2014-05-07 6:30:49

تركيب المجفف

التركيب جانب بجانب

للتركيب الصحيح، نوصيك بالاستعانة بفني تركيب محترف. للتركيب:

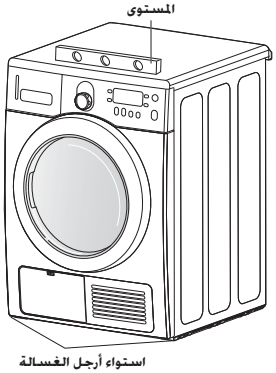

١. قم بنقل المجفف إلى مكان مناسب للتركيب. يجب مراعاة تركيب المجفف والغسالة جنبًا إلى جنب. قم بوضع قطعتين من أسطح الكرتون الماصة للصدمات فوق الأرض. قم برفع المجفف على إحدى جوانبه لتتمكن من وضعه فوق الأسطح الماصة للصدمات.
٢. اجعل خلفية المجفف في وضع رأسي.
٣. يجب أن يكون المجفف مستوي، للتأكد من توفير المجفف أداء مثالي للتجفيف. لتقليل الاهتزاز أو الضوضاء أو الحركة غير المرغوب فيها، يجب أن يكون سطح الأرض ثابت ومستوٍ بشكلٍ كامل.

اجعل المجفف في نفس ارتفاع الغسالة. قم بخفض الأرجل المستوية بالكامل عن طريق تحويلها في عكس اتجاه عقارب الساعة ثم أرخ الأرجل مرة أخرى بتحويلها في نفس اتجاه عقارب الساعة

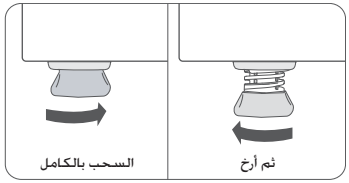

قم بضبط الأرجل المستوية كما يلزم فقط لتكون في نفس مستوى المجفف، مع الأخذ في الاعتبار أن إطالة الأرجل المستوية أكثر من اللازم قد يتسبب في اهتزاز المجفف.

٤. راجع جزء "المتطلبات الكهربية" (راجع صفحة ١١).
قبل التشغيل أو الاختبار.
٥. بالنسبة للمستوى، تحقق من المجفف وقم بإجراء التعديلات الضرورية للأرجل المستوية.
٦. قم بتوصيل قابس المجفف بالكهرباء. وتحقق من التشغيل باستخدام قائمة الاختيار أدناه.

قائمة اختيار التركيب النهائية

- ☐ تم توصيل المجفف بمخرج كهرباء وتم توصيل بالأرضي بشكل صحيح.
- ☐ تم ضبط مستوى المجفف ووضعه بشكل ثابت على الأرض.
- ☐ تم بدء تشغيل المجفف للتأكد من أنه يعمل ويقوم بالتسخين ويمكن إيقاف تشغيله.

SDC1A809-02805J-05_AR_140507.indd Sec3:12 2014-05-07 6:30:49

تصريف الماء بدون استخدام خزان الماء

يمكنك استخدام المجفف بدون استخدام خزان الماء باتباع الإجراءات أدناه.

توصيل خرطوم التصريف

يمكن للمجفف ضخ الماء المكثف مباشرة خارج DRYER (المجفف) باستخدام خرطوم التصريف المتوفر.
الإجراءات لتوصيل خرطوم التصريف كالتالي.

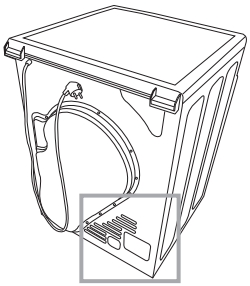

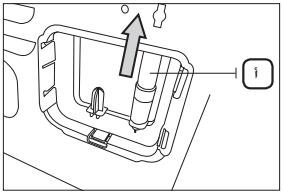

١ افصل خرطوم التصريف (أ).

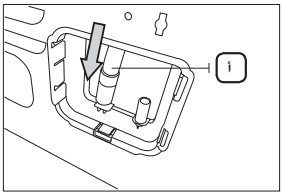

٢. قم بتوصيل خرطوم التصريف (أ) بالفتحة الأخرى.

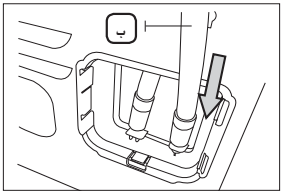

٣. قم بتوصيل الخرطوم الملحق(خرطوم التصريف الطويل) (ب) بالفتحة المجاورة للفتحة المتصلة بخرطوم التصريف (أ).

تنبيه
- عند توصيل الخرطوم (ب)، يجب مراعاة أن ارتفاع الخرطوم لا يتجاوز ٩٠سم.
- بعد توصيل خرطوم التصريف، يمكن تصريف الماء المتكثف مباشرة عبر مخرج التصريف من خلال خرطوم التصريف المُوصل أو من خلال المغسلة أو من خلال مخرج تصريف المغسلة.

SDC1A809-02805J-05_AR_140507.indd Sec3:13 2014-05-07 6:30:49

تركيب المجفف

توصيل خرطوم التصريف

يمكنك وضع نهاية خرطوم التصريف بثلاث طرق:

١. **فوق حافة حوض الغسيل:** يجب وضع خرطوم التصريف في مستوى أقل من ٩٠سم. إذا كانت هناك حاجة إلى رفع نهاية خرطوم التصريف فوق الأرض، فإننا نوصي أن يكون ارتفاع خرطوم التصريف ما بين ٦٠سم ~ ٩٠سم. للحفاظ على فتحة خرطوم التصريف منثنية، استخدم حامل الخرطوم البلاستيكي المرفق. ثبت الحامل على الجدار بواسطة خطاف أو ثبته في الصنبور بواسطة سلك لمنع سقوط خرطوم التصريف من الحركة.

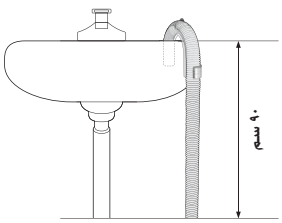

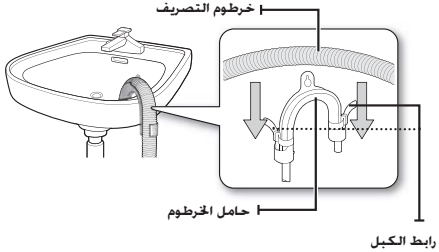

٢. قم بتجميع خرطوم التصريف وحامل الخرطوم و قم بتثبيتهم بواسطة رابط كبل.

٣. يمكنك تصريف الماء المتكثف عن طريق توصيل الخرطوم الملحق (خرطوم التصريف الطويل) إلى مخرج التصريف مباشرة.

توصيل خرطوم التصريف

يمكن تصريف الماء المتكثف الذي يخرج أثناء التجفيف على الفور عن طريق توصل خرطوم التصريف بالصنبور.

١. قم بتجميع موصل الخرطوم والخرطوم معًا.

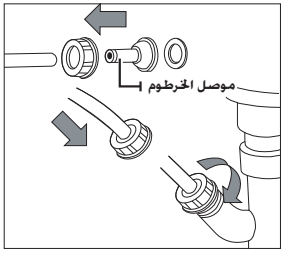

تنبيه: قد يوجد خطر تسرب الماء من موصل الخرطوم والخرطوم الملحق. لذلك يُرجى التأكد من توصيلهم بإحكام.

٢. قم بتوصيل نهاية الخرطوم بالصنبور.

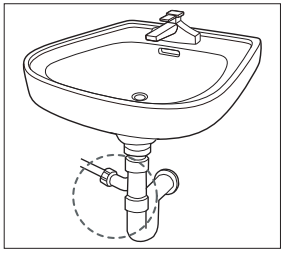

SDC1A809-02805J-05_AR_140507.indd Sec3:14 2014-05-07 6:30:49

تثبيت التركيب

في حالة شراء طقم التجميع الإضافي، الرجاء الاتصال بمركز خدمة عملاء Samsung أو أحد الموزعين المحليين.
[رقم القطعة: SK-DA / SK-DH]

١. قم بوضع المجفف بحرص على جانبه. استخدم مواد التعبئة حتى لا تخدش الشكل النهائي للمجفف.

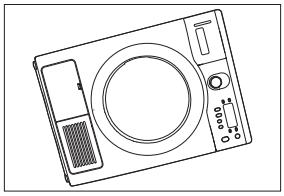

٢. قم بتركيب الوسادات المطاطية على قاعدة المجفف.
- قم بوضع أربع وسادات مطاطية في حزمة الأجزاء. قم بإدخال الوسادات المطاطية إلى داخل الفتحات الموجودة أسفل الأرجل المستوية.
- قم بشراء حزمة أدوات الرص بشكل منفصل.

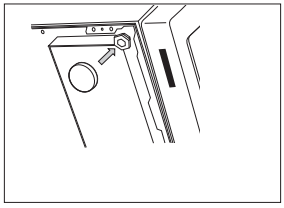

٣. اجعل المجفف عموديًا.

تنبيه: يمكن تركيب طقم التجميع مع عائلة منتجات Samsung فقط.

٤. قم بتركيب مسند التحميل في المجفف.
- أزل مسمار الغطاء العلوي للغسالة من الخلف ناحية اليسار. قم بمحاذاة فتحات مسند التحميل اليسرى مع فتحة مسمار الغطاء العلوي الموجودة في الجزء الخلفي للوحدة ناحية اليسار وقم بتبديل المسمار.

اجعل المسار غير محكم حتى يسهل محاذاة فتحة المجفف.
- كرر الخطوة السابقة على الجانب الأيمن.

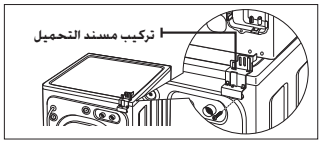

٥. قم بتركيب المجفف ومسند التحميل على الغسالة

- قم برفع المجفف أعلى الغسالة. قم بحماية لوحة تحكم الغسالة باستخدام ورق كرتون أو أي وسيلة حماية أخرى. تأكد من رفع المجفف إلى أعلى بصورة كافية لتنظيف لوحة تحكم الغسالة.

تنبيه: إصابة شخصية. يُوصى برفع المجفف بواسطة أكثر من شخصين إلى المكان المناسب بسبب كبر حجمه وثقل وزنه. قد يؤدي عدم الالتزام بهذه التعليمات إلى إصابة جسدية.
- قم بمحاذاة الفتحات في مسند التحميل مع الفتحات في اللوحة الخلفية للمجفف باستخدام مفك فيليبس، وقم بربط مسامير 12 x M4.
- احكم مسامير مسند تحميل الغسالة؛ وبعد ذلك احكم كافة مسامير أدوات الرص.

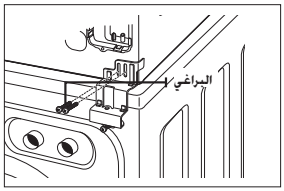

٦. إنهاء عملية التركيب
- راجع إرشادات تركيب الغسالة لاستكمال تركيب الغسالة.
- راجع إرشادات تركيب المجفف لاستكمال تركيب المجفف.
- حرك أو أزح الغسالة والمجفف المتراصين إلى مكانهما بحرص شديد. استخدم وسادات ناعمة أو أي أداة انزلاق للمساعدة في التحريك و حماية الأرضية.

تنبيه: لا تدفع المجفف بمجرد تم تركيبه أعلى الغسالة. فقد يؤدي دفع المجفف إلى حشر الأصابع.

SDC1A809-02805J-05_AR_140507.indd Sec3:15 2014-05-07 6:30:50

تركيب المجفف

عكس الباب

يمكنك تغيير اتجاه فتح الباب وفقًا لمتطلباتك (مكان التركيب، قيود الفراغ).

⚠ تنبيه: يتم ذلك وفقًا لاحتياجات العميل. يمكن للفني المتخصص أو العميل القيام بذلك بنفسه مباشرة.

١. قم بفصل سلك الطاقة.
٢. قم بفك المسمارين من مفصلة الباب.
٣. ارفع الباب لفصله.

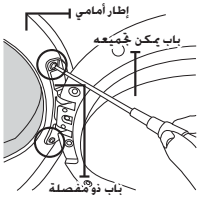

٤. قم بفك الستة عشر مسمارًا.

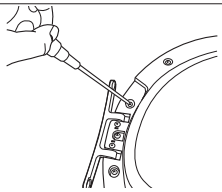

٥. بعد فك المسمار، قم بلف الماسك الزجاجي والباب الزجاجي وغطاء الباب (I) بمقدار ١٨٠ درجة كما هو موضح بالشكل.

⚠ تنبيه: حيث أن الماسك الزجاجي والباب الزجاجي وغطاء الباب (I) غير مثبتين بشكل كامل، قم بتدويرهم قابضًا على الجزء السفلي لكي لا ينفصلوا.
- افعل ذلك بحرص حتى لا يتم نزع غطاء الباب.

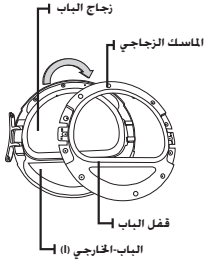

٦. بعد تدويرهم ١٨٠ درجة، قم بالإمساك بهم كما هو الموضح بالشكل.

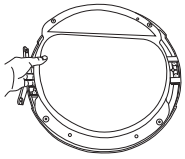

٧. قم بتجميع الماسك الزجاجي في الاتجاه الصحيح. (بعد الفك، قم بتجميعهم بتدويرهم بمقدار ١٨٠ درجة).

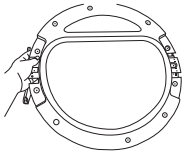

SDC1A809-02805J-05_AR_140507.indd Sec3:16 2014-05-07 6:30:50

٨. قم بربط الستة عشر مسماراً في المكان الصحيح.
٩. لاحظ أن اثنين من المسامير لديهم أطوال مختلفة عن البقية. (استخدم المسامرين الأطول لرافعة الباب).

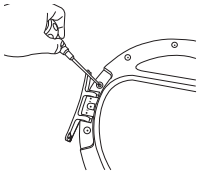

١٠. قم بتحريك مكان المسمار الموجود خلف مفصلة الباب.

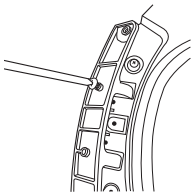

١١. قم بربط المسمار في أسفل الفتحة.

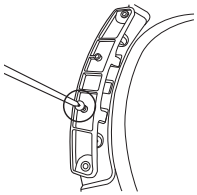

١٢. قم بفك المسمارين المستخدمين في تثبيت الإطار الأمامي الموجود على اليسار.
١٣. قم بفك المسمارين المستخدمين في تثبيت رافعة الحامل الموجودة على اليسار.

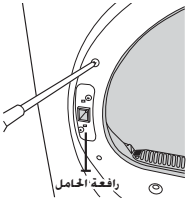

١٤. الآن، انتقل إلى الجانب الأيمن من المنتج وقم بربط المسمارين المستخدمين في تثبيت الإطار الأمامي والمسمارين المستخدمين في تثبيت رافعة الحامل.

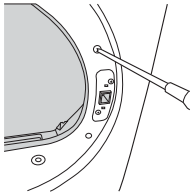

١٥. قم بمحاذاة الباب مع فتحات التثبيت.
١٦. قم بربط المسمارين المستخدمين في تثبيت مفصلة الباب.

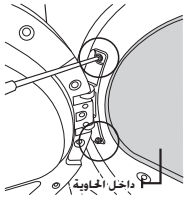

عند الضرورة، يمكنك إعادة اتجاه فتح الباب من خلال اتباع الإجراءات السابقة.

SDC1A809-02805J-05_AR_140507.indd Sec3:17 2014-05-07 6:30:50

إرشادات التشغيل، تلميحات

نظرة عامة على لوحة التحكم

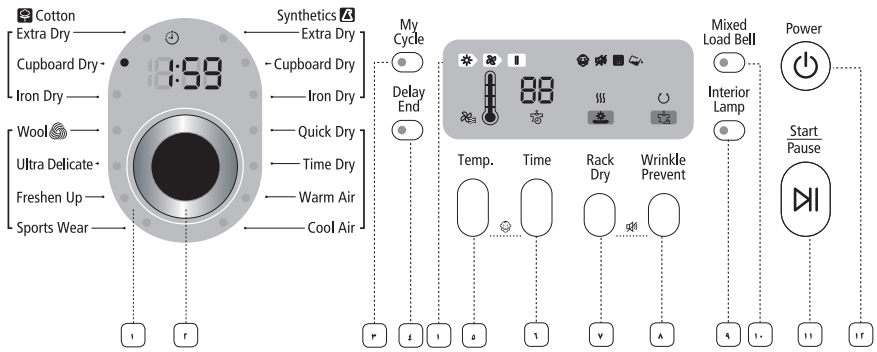

١ شاشة العرض الرسمية الرقمية	تعرض الوقت المتبقي في دورة التجفيف وكافة المعلومات الخاصة بالدورة بالإضافة إلى رسائل الخطأ.
٢ Cycle Selector (قرص تحديد الدورة)	لتحديد إحدى الدورات. قم بتدوير Cycle Selector (قرص تحديد الدورة) حتى تصل إلى الدورة المطلوبة. [Cottons (الملابس القطنية)] Cupboard Dry (تجفيف خزانة) ← Extra Dry (تجفيف فائق) ← [Synthetics (ملابس الألياف الصناعية)] Extra Dry (تجفيف فائق) ← Cupboard Dry (تجفيف خزانة) ← Iron Dry (تجفيف مكواة) ← Quick Dry (تجفيف سريع) ← Time Dry (مدة التجفيف) ← Warm Air (هواء دافئ) ← Cool Air (هواء بارد) ← Sports Wear (الملابس الرياضية) ← Freshen Up (الإنعاش) ← Ultra Delicate (نعومة فائقة) ← Wool (صوف) ← [Cottons (الملابس القطنية)] Iron (الكي) ← Cupboard Dry (تجفيف خزانة) **Cotton (الملابس القطنية)** - للملابس القطنية خفيفة أو متوسطة الاتساخ وأغطية السرير ومفارش المائدة والملابس الداخلية والمناشف والقمصان وما إلى ذلك. • Extra Dry (تجفيف فائق) - استخدم هذه الدورة لتجفيف المنسوجات الصوفية أو الملابس التي ينبغي أن تكون جافة بشكل فائق مثل الجينز أو المناشف. • Cupboard Dry (تجفيف خزانة) - استخدم هذه الدورة لتجفيف أحمال الغسيل مثل الملابس القطنية والداخلية والشراشف (لا تكون هذه الدورة مناسبة للجينز). • Iron (الكي) - تنهي هذه المرحلة دورة التجفيف في حالة رطبة تلاءم مرحلة الكي. **Synthetics (ملابس الألياف الصناعية)** - لغسل البلوزات أو القمصان متوسطة أو خفيفة الاتساخ وغيرها من الملابس المصنوعة من البوليستر (الديولين والتريفيرا) ومادة البوليامايد (البيرلون والنايلون) أو الأنسجة الصناعية الأخرى. • Extra Dry (تجفيف فائق) - استخدم هذه الدورة لتجفيف المنسوجات الصوفية أو الملابس التي ينبغي أن تكون جافة بشكل فائق مثل الجينز أو المناشف. • Cupboard Dry (تجفيف خزانة) - استخدم هذه الدورة لتجفيف أحمال الغسيل مثل القمصان والبلوزات وأغطية السرير ومفارش المائدة. (لا تكون هذه الدورة مناسبة للجينز). • Iron (الكي) - تنهي هذه المرحلة دورة التجفيف في حالة رطبة تلاءم مرحلة الكي. **Quick Dry (تجفيف سريع)** - توفر هذه الدورة فترة تجفيف تستمر لـ ٢٩ دقيقة ويتم تحديد مستوى درجة الحرارة بشكل تلقائي. **Time Dry (مدة التجفيف)** - تتيح لك الدورة Time Dry (مدة التجفيف)تحديد الوقت المراد للدورة ومستوى درجة الحرارة في نفس الوقت. قم بتدوير قرص تحديد الدورة إلى الخيار Time Dry (مدة التجفيف). ثم اضغط على الزر Time (الوقت) لتعيين مدة التجفيف. اضغط على الزر Time (الوقت) بشكل متكرر للمرور عبر إعدادات الوقت. ويزداد الوقت بمعدل ١٠ دقائق ليصل إلى ٩٠ دقيقة. **Warm Air (هواء دافئ)** - تكون هذه الدورة مناسبة للملابس الصغيرة والغسيل قبل التجفيف والأقمشة العادية مع استخدام درجة حرارة منخفضة لمدة ٢٠ دقيقة. **Cool Air (هواء بارد)** - تكون هذه الدورة مناسبة لجميع الأقمشة التي تحتاج إلى تدوير منعش دون تسخين.

SDC1A809-02805J-05_AR_140507.indd Sec5:18 2014-05-07 6:30:50

	Wool (صوف) - تكون هذه الدورة مناسبة فقط للملابس الصوفية التي يمكن غسلها آليًا ويمكن تجفيفها عن طريق دورات التجفيف. ينبغي أن يكون وزن الغسيل أقل من كيلو جرام واحد. وقد تم اعتماد الدورة Wool (صوف) من قبل شركة Woolmark للعناية الكاملة بالمنتجات الصوفية، برقم M1006 (رقم اعتماد شركة Woolmark). طرازات Wool mark المتوفرة: SDC1A809 **Ultra Delicate (نعومة فائقة)** - صُممت الدورة Ultra Delicate للملابس الداخلية وتكون درجة الحرارة منخفضة. **Freshen Up (هواء منعش)** - مع هذه الدورة يمكن التخلص من الروائح وإنعاش الثياب. **Sports Wear (الملابس الرياضية)** - استخدم هذه الدورة مع الملابس المقاومة للماء (باستثناء Gore-Tax) للحفاظ على مظهرها وملمسها. للحصول على أفضل نتائج لعملية التجفيف، اقلب الملابس على ظهرها قبل تجفيفها. قد لا يؤدي التحميل الزائد للمجفف إلى الحصول على النتائج نفسها. لمعرفة "الحد الأقصى للتحميل" في كل دورة، راجع "جدول الدورات" الموجود بالملحق.
٣ **زر التحديد My Cycle (الدورة المفضلة)**	يمكنك اختيار دورة التجفيف المفضلة بما في ذلك الدورة ودرجة الحرارة وخيار مستوى "التجفيف" وما إلى ذلك. (راجع الصفحة ٢١ لمزيد من التفاصيل.)
٤ **زر التحديد Delay End (تأجيل التوقف)**	اضغط على هذا الزر بشكل متكرر للاختيار من بين خيارات الزر Delay End (تأجيل التوقف) المتوفرة (من ٤ ساعات وحتى ١٩ ساعة بزيادة ساعة واحدة). تشير الساعة المعروضة إلى وقت انتهاء دورة التجفيف.
٥ **زر التحديد .Temp (درجة الحرارة)**	اضغط على هذا الزر بشكل متكرر للتبديل بين خيارات مستوى درجة حرارة التجفيف المتوفرة.
٦ **زر التحديد Time (الوقت)**	عند استخدام دورات "التجفيف اليدوي"، يمكن ضبط الوقت عن طريق الضغط على زر التحديد Time (الوقت). ٢٠ دقيقة ← ٣٠ دقيقة ← ٤٠ دقيقة ← ٥٠ دقيقة ← ٦٠ دقيقة ← ٧٠ دقيقة ← ٨٠ دقيقة ← ٩٠ دقيقة عند استخدام الدورة Sensory Dry (تجفيف حساس)، يتوقف مؤشر الوقت الخاص بدورة التجفيف اليدوية لأنه يتم تحديد مدد التجفيف الدقيقة حسب مستويات الرطوبة المتغيرة.
٧ **زر التحديد Rack Dry (رف التجفيف)**	يكون الزر Rack Dry (رف التجفيف) متوفرًا فقط أثناء دورة مدة التجفيف. ويتم في هذه الحالة تعيين درجة الحرارة إلى Low (منخفضة) فقط. (راجع صفحة ٢٢ لمزيد من التفاصيل.)
٨ **زر التحديد Wrinkle Prevent (مانع التجعيد)**	يوفر الوضع Wrinkle Prevent (مانع التجعيد) ٦٠ دقيقة تقريبًا من التدوير المتقطع في هواء بدون الحرارة في نهاية الدورة لتقليل تجعيد الأقمشة. اضغط على الزر **Wrinkle Prevent (مانع التجعيد)** لتنشيط هذه الميزة. سيضيء المؤشر الموجود فوق اللوحة عند تحديد الوضع Wrinkle Prevent (مانع التجعيد). ويعمل هذا الوضع على عدم تعرض الغسيل المجفف للتجعيد بسبب الدوران المتكرر للحاوية بعد اكتمال دورة التجفيف. (حتى بعد ظهور الرسالة "End"، ستدور الحاوية على فترات متقطعة.)
٩ **زر التحديد Interior Lamp (المصباح الداخلي)**	يعمل على إضاءة حاوية المجفف أثناء تشغيله. ويمكن ضبطه أثناء تشغيل المجفف أو إيقاف تشغيله. وفي حالة عدم إيقاف تشغيل "مصباح الحاوية" خلال ٤ دقائق من تشغيله، يتم إيقاف تشغيله تلقائيًا.
١٠ **زر التحديد Mixed Load Bell (جرس الحمولة المتنوعة)**	ينتج عن هذا الزر إنذار لتنبيه المستخدم عندما يصل مستوى التجفيف المتوسط إلى التجفيف الرطب (التجفيف بنسبة ٨٠ ٪) ويتضمن الغسيل أنواعًا مختلفة من الملابس والأقمشة. وعند الوصول إلى درجة التجفيف المطلوبة، يومض المصباح المشع للضوء الخاص بجرس الحمولة المتنوعة.
١١ **زر التحديد Start/Pause (تشغيل/إيقاف مؤقت)**	اضغط على هذا الزر لبدء دورة التجفيف. فإذا كان المجفف قيد التشغيل، اضغط عليه مرة واحدة لإيقاف المجفف مؤقتًا. واضغط على الزر مرة أخرى لإعادة تشغيل دورة التجفيف.
١٢ **الزر Power (تشغيل)**	اضغط على هذا الزر لتشغيل المجفف واضغط عليه مرة أخرى لإيقاف تشغيله. في حالة عدم الضغط على أي من أزرار المجفف لمدة تزيد عن ١٠ دقائق أثناء تشغيله، يتم إيقاف تشغيله تلقائيًا.

SDC1A809-02805J-05_AR_140507.indd Sec5:19 2014-05-07 6:30:50

إرشادات التشغيل، تلميحات

التأمين ضد عبث الأطفال

وهي عبارة عن وظيفة لمنع الأطفال من العبث بالمجفف.

التنشيط/إلغاء التنشيط

إذا كنت ترغب في تنشيط أو إلغاء تنشيط Child Lock (التأمين ضد عبث الأطفال).
اضغط على كلا الزرين .Temp (درجة الحرارة) و Time (الوقت) في نفس الوقت لمدة ثلاث ثوانٍ.

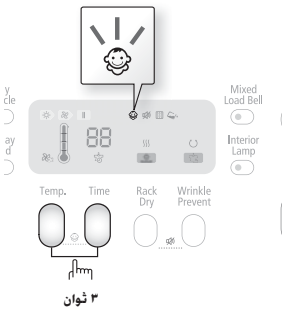

٣ ثوان

يضيء علامة "**Child Lock (التأمين ضد عبث الأطفال)**" عند تنشيط هذه الميزة.

- عند تشغيل المجفف، تكون الوظيفة Child Lock (التأمين ضد عبث الأطفال) متوفرة.
- بمجرد ضبط الوظيفة Child Lock (التأمين ضد عبث الأطفال)، فلن يستجيب أي زر باستثناء الزر **Power (تشغيل)** حتى يتم إلغاء تنشيط الوظيفة Child Lock (التأمين ضد عبث الأطفال).
- في حالة تشغيل المجفف مرة أخرى، تظل الوظيفة Child Lock (التأمين ضد عبث الأطفال) قيد التشغيل.
- في حالة عدم استجابة الأزرار الأخرى، باستثناء الزر **Power (تشغيل)**، تحقق من تشغيل مؤشر Child Lock (التأمين ضد عبث الأطفال) لمعرفة ما إذا كانت هذه الوظيفة قيد التشغيل.

إيقاف التنبيه

يمكن تحديد الوظيفة Signal Off (إيقاف التنبيه) خلال كافة الدورات. وعند تحديد هذه الوظيفة، يتم إيقاف تشغيل تنبيه الصوت لكافة الدورات. حتى في حالة تشغيل الجهاز أو إيقاف تشغيله بشكل متكرر، لا يتغير الإعداد الذي تم اختياره.

التنشيط/إلغاء التنشيط

إذا كنت تريد تشغيل الوظيفة Signal off (إيقاف التنبيه)، اضغط على الزرين **Rack Dry (رف التجفيف)** و **Wrinkle Prevent (مانع التجعيد)** في نفس الوقت لمدة ٣ ثوان.

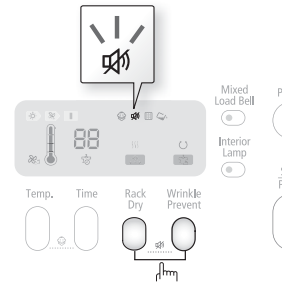

٣ ثوان

SDC1A809-02805J-05_AR_140507.indd Sec5:20 2014-05-07 6:30:50

الدورة المفضلة

تتيح لك هذه الوظيفة تنشيط الدورة المخصصة والتي تتضمن خيارات جودة التجفيف ودرجة حرارة التجفيف ومدة التشغيل.
بالضغط على الزر **My cycle (الدورة المفضلة)**، يتم تنشيط الإعدادات المستخدمة أثناء الوضع السابق My cycle (الدورة المفضلة).
Default (افتراضي) : Normal Cycle (دورة عادية))
في حالة تنشيط الوضع My cycle (الدورة المفضلة)، يضئ مؤشر My cycle (الدورة المفضلة).
يمكنك تعيين كافة الخيارات في الوضع My Cycle (الدورة المفضلة) كالتالي.

١. حدد الدورة باستخدام Cycle Selector (قرص تحديد الدورة).
٢. بعد الانتهاء من تحديد الدورة، قم بضبط كل خيار تريده.

تحتوي كل دورة على خيارات افتراضية معينة بشكل تلقائي.
للاطلاع على هذه الخيارات الافتراضية، انتقل إلى الصفحة ٣٣.

٣. بعد ذلك، يمكنك بدء تشغيل الوظيفة My Cycle (الدورة المفضلة) عن طريق الضغط على الزر **Start/Pause (تشغيل/إيقاف مؤقت)** في الوضع My Cycle (الدورة المفضلة). يتم عرض الدورة والخيارات التي قمت بتحديدها في المرة القادمة التي تختار فيها الوظيفة My Cycle (الدورة المفضلة).

يمكنك تغيير إعدادات الوظيفة My Cycle (الدورة المفضلة) بواسطة تكرار العملية نفسها المذكورة أعلاه.
ويتم عرض الإعداد الأخير الذي قمت باستخدامه في المرة القادمة التي تختار فيها الوظيفة My Cycle (الدورة المفضلة).

تأجيل التوقف

يمكنك ضبط المجفف لإنهاء دورة التجفيف بشكل تلقائي في وقت لاحق. قم باختيار تأجيل الوقت من ٤ ساعات وحتى ١٩ ساعة (بزيادة ساعة واحدة). تشير الساعة المعروضة إلى الوقت الذي سيتم فيه إنهاء دورة التجفيف.

١. يمكنك ضبط المجفف تلقائيًا أو يدويًا حسب نوع الملابس التي ترغب في تجفيفها.
٢. اضغط على الزر **Delay End (تأجيل التوقف)** بشكل متكرر حتى يتم تعيين وقت التأجيل المطلوب. في حالة تعيين وقت التأجيل، يتم "تشغيل" الوظيفة Delay End (تأجيل التوقف).
٣. اضغط على الزر **Start/Pause (تشغيل/إيقاف مؤقت)**. سيومض المؤشر "Delay End (تأجيل التوقف)" وستبدأ الساعة بالعد التنازلي حتى انتهاء الوقت المحدد.
٤. لإلغاء الوظيفة Delay End (تأجيل التوقف)، اضغط على الزر **Power (تشغيل)** ثم قم بتشغيل المجفف من جديد.

المصباح الداخلي

يعمل على إضاءة حاوية المجفف أثناء تشغيله.

Setting & releasing (الضبط & إلغاء التنشيط)

إذا كنت تريد ضبط Interior Lamp (المصباح الداخلي) أو إلغاء تنشيطه، اضغط على زري **Interior Lamp (المصباح الداخلي)** معًا.

يمكن القيام بهذا الإجراء بمجرد توصيل سلك التيار الكهربي بمقبس الحائط. وفي حالة عدم إيقاف تشغيل "مصباح الحاوية" خلال ٥ دقائق من تشغيله، يتم إيقاف تشغيله تلقائيًا.

SDC1A809-02805J-05_AR_140507.indd Sec5:21 2014-05-07 6:30:51

إرشادات التشغيل، تلميحات

رف التجفيف

تركيب رف التجفيف

١. افتح باب المجفف.
٢. ركب رف التجفيف داخل الحاوية، بوضع الحافة الأمامية لرف التجفيف فوق علبة مصفاة النسالات.
٣. ضع الأرجل الخلفية في الأجزاء المجوفة بالجهة الخلفية للمجفف ثم اضغط لأسفل على رف التجفيف من المنتصف لتثبيته.
٤. ضع العناصر التي تريد تجفيفها على الرف، تاركًا مسافة بينها حتى يتخللها الهواء.
٥. أغلق باب المجفف.
٦. اضغط على الزر **Power (تشغيل)**.
٧. حدد Time Dry (مدة التجفيف) باستخدام قرص اختيار الدورة، عين الوقت ثم اضغط على الزر **Rack Dry (رف التجفيف)**.

- يمكنك تعيين مدة التجفيف لفترة تصل إلى ٩٠ دقيقة، ويتم تعيين إعداد درجة الحرارة تلقائيًا إلى Low (منخفضة) ولا يمكن تغييرها. حدد الوقت على حسب رطوبة العناصر ووزنها. شغل المجفف. قد تكون هناك ضرورة إلى إعادة تعيين المؤقت إذا تطلب الأمر وقت تجفيف أطول.
- في حالة عدم تحديد الدورة Time Dry (مدة التجفيف)، لا يتم تحديد وظيفة Rack Dry (رف التجفيف).

٨. اضغط على الزر **Start/Pause (تشغيل/إيقاف مؤقت)**.

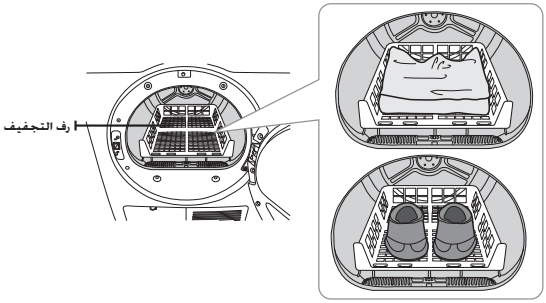

العناصر المقترحة	ملاحظات (الحد الأقصى ١,٥ كجم)
السترات القابلة للغسل (طبق هذه السترات إلى أشكال وضعها بشكل مستو على الرف)	عند تجفيف الغسيل باستخدام "الرف"، قم بطي الملابس ووضعها على "الرف" لتجنب الكرمشة.
الدمي المحشوة (المحشوة بالقطن أو ألياف البوليستر)	
الدمي المحشوة (المحشوة بالألياف الهشة أو المطاط)	
الوسادات المطاطية الهشة	
الأحذية الرياضية	لتجفيف الأحذية الرياضية، قم بوضعها على "الرف" بحيث يكون نعل الحذاء لأسفل.

⚠ قد ينتج عن تجفيف المطاط الهش أو البلاستيك أو المطاط باستخدام إعداد التسخين تلف هذه العناصر أو نشوب حريق.
تنبيه

⚠ قد يحدث تلف للأحذية عند تجفيفها، ومن ثم ينبغي استخدام الدورة Rack Dry (رف التجفيف) لتجفيف الأحذية.
تنبيه

SDC1A809-02805J-05_AR_140507.indd Sec5:22 2014-05-07 6:30:51

وضع الملابس في المجفف بشكل سليم

- قم بوضع حمولة غسيل واحدة في المجفف في كل مرة.
- سوف تجف الأحمال المختلطة من الملابس الثقيلة والخفيفة بطريقة مختلفة، والذي قد ينتج عنه تجفيف الملابس الخفيفة بينما تبقى الملابس الثقيلة رطبة في نهاية دورة التجفيف.
- قم بإضافة قطعة أو أكثر من الملابس المتشابهة إلى المجفف عندما يتطلب الأمر تجفيف قطعة أو اثنين من الملابس فقط لأن ذلك يعمل على تحسين عملية التدوير وكفاءة التجفيف.
- تعمل الحمولة الزائدة على تقييد عملية التدوير، مما ينتج عنه تجفيف متقطع وكرمشة زائدة لبعض الملابس.
- تأكد من أنك تقوم بإدخال الملابس التي تم تجفيفها بواسطة الغسالة المناسبة.
- يجب عدم تجفيف المنسوجات غير المغسولة
- يجب عدم تجفيف المنسوجات التي بها بقع من الزيت أو الكحول أو البترول أو ما إلى ذلك.

بدء الاستخدام

١. ضع الملابس في المجفف بدون إفراط - تجنب الزيادة.
٢. أغلق الباب.
٣. حدد الدورة والخيارات المناسبة للحمولة (راجع الصفحات ٢٠ و٢١).
٤. اضغط على الزر **Start/Pause (تشغيل/إيقاف مؤقت)**.
٥. سوف يضيء مؤشر المجفف.
٦. سوف تظهر مدة التجفيف المقدرة على الشاشة.
قد يتغير الوقت لكي يوضح بشكل أفضل مدة التجفيف المتبقية في الدورة.

- عندما تكتمل الدورة يظهر "End" ("النهاية") على الشاشة.
- يؤدي الضغط على زر Power (الطاقة) إلى إلغاء الدورة وإيقاف المجفف.
- سوف تضيء أضواء المؤشر الخاص بكل من Drying (التجفيف) وCooling (التبريد) وWrinkle Prevent (منع الكرمشة) أثناء إجراء هذه العمليات في الدورة.

SDC1A809-02805J-05_AR_140507.indd Sec5:23 2014-05-07 6:30:51

العناية والتنظيف

تنظيف حاوية المصفاة

- بعد كل حمولة.
- لتقليل مدة التجفيف.
- للتشغيل بكفاءة أكثر في استخدام الطاقة.

لا تقم بتشغيل المجفف دون أن تكون حاوية المصفاة في مكانها.

تنبيه قد يكون هناك خطر تلف الغسيل عند تجفيف الملابس بدون استخدام حاوية المصفاة.

تنظيف المكثف

- قم بتنظيف المكثف مرة واحدة في الشهر
- قم بتنظيفه بالماء

تنبيه قد يقل أداء التجفيف إذا لم تقم بتنظيف المكثف لمدة طويلة.

لوحة التحكم

قم بتنظيف لوحة التحكم بقطعة قماش ناعمة ورطبة. لا تستخدم المواد الكاشطة.
لا تقم برش المنظفات على اللوحة مباشرة.
قد يتلف المظهر الخارجي للوحة التحكم بواسطة بعض المنتجات سابقة المعالجة التي تستخدم لإزالة التلوث والبقع.
استخدم هذه المنتجات بعيدًا تمامًا عن المجفف وقم في الحال بإزالة أي بقع أو أثار دهان.

المجفف الدوار

قم بإزالة أي بقع مثل الكربون أو الحبر أو أصباغ الملابس (من العناصر الجديدة مثل المناشف أو الجينز) باستخدام منظف يفي بكافة الأغراض.
قم بتجفيف قطع القماش أو المناشف القديمة لإزالة أي بقع زائدة أو مواد تنظيف.
يمكن رؤية بعض البقع. بعد اتباع هذه الخطوات ولكن لا يمكن لهذه البقع أن تنتقل لأي حمولة قادمة.

مجفف دوار صلب لا يصدأ

لتنظيف المجفف الدوار الصلب المضاد للصدأ، استخدم قطعة قماش رطبة مع منظف خفيف وغير كاشط ويناسب الأسطح الصلبة المضادة للصدأ.
قم بإزالة أثار المنظف وجفف باستخدام قطعة قماش نظيفة.

الأسطح الخارجية للمجفف

المجفف بأكمله له مظهر خارجي لامع. قم بالتنظيف باستخدام قطعة قماش ناعمة ورطبة. لا تستخدم مواد كاشطة. قم بحماية السطح من الأشياء الحادة لأنها ربما تخدش المظهر الخارجي للمجفف أو تتلفه.
لا تضع أي أشياء حادة أو ثقيلة أو حتى علبة المسحوق على المجفف. قم بحفظ هذه الأشياء في علبة تخزين منفصلة أو في القاعدة التي تم شراؤها.

SDC1A809-02805J-05_AR_140507.indd Sec10:24 2014-05-07 6:30:51

ضخ الماء المتكثف (💧)

١. اسحب خزان الماء إلى الأمام لفصله.

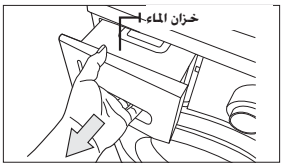

تنبيه: عند نزع خزان الماء من المنتج، اقبض عليه بكلتا يديك نظرًا لكونه ثقيل وتوخى الحذر حتى لا تسكب الماء داخل الخزان.

٢. قم بإزالة الماء المتكثف من داخل خزان الماء.
- قم بإزالة الماء المتكثف من الخزان عقب كل عملية تجفيف.

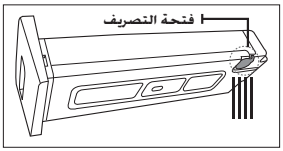

تحذير: قد يوجد خطر تسرب الماء إذا لم تقم بتصريف الماء بعد استخدام المنتج. لذا يرجى التأكد من تصريف الماء.

إذا قمت بتفريغ خزان الماء والضغط على زر Start (تشغيل)، سيتم إيقاف تشغيل Water Tank Full (خزان الماء الممتلئ) 💧 الموجود على لوحة LED.

تنظيف حاوية المصفاة (▦)

١. افتح الباب وانزع المصفاة بسحبها إلى أعلى.

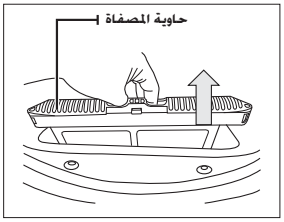

٢. افتح حاوية المصفاة وقم بتنظيفها.
- افتح حاوية المصفاة بعد اكتمال عملية التجفيف.

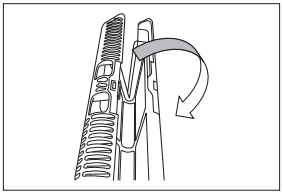

تنبيه:
- قم بتنظيف حاوية المصفاة في فترات التنظيف المحددة، حيث أن أداء التجفيف قد يقل وبالتالي يظهر خطر نشوب حريق إذا لم تقم بتنظيف حاوية المصفاة بعد فترة معينة من الاستخدام.
- قد يقل أداء التجفيف وبالتالي يظهر خطر نشوب حريق في حالة استخدام حاوية مصفاة مكسورة أو تالفة. وفي هذه الحالة يجب استبدال حاوية المصفاة.
- قم بتنظيف حاوية المصفاة بعد كل عملية تجفيف.

- إذا كان سطح المصفاة مبتلة، استخدم المصفاة بعد تجفيفها بشكل كامل.
- إذا قمت بتنظيف حاوية التنظيف والضغط على زر Start (تشغيل)، سيتم إيقاف تشغيل Filter (المصفاة) ▦ على لوحة LED.

SDC1A809-02805J-05_AR_140507.indd Sec10:25 2014-05-07 6:30:51

العناية والتنظيف

تنظيف مجمع المكثف

١. افتح غطاء حجرة المكثف.

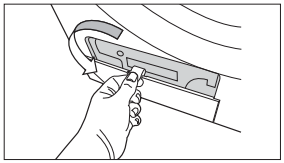

٢. افتح المكثف المثبت.

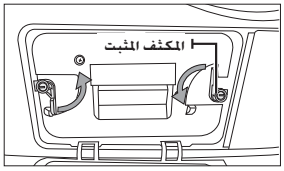

٣. قم بإزالة المكثف.

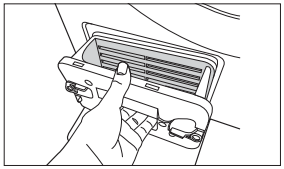

٤. قم بتنظيف المكثف بشكل كامل تحت صنبور الماء المتدفق بحيث يتخلله الماء.

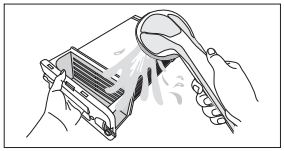

تنبيه

- قد يقل أداء التجفيف إذا لم تقم بتنظيف المكثف بعد مدة محددة من الاستخدام لذلك يجب عليك تنظيف المكثف خلال فترات زمنية محددة.
- قم بتنظيف المكثف مرة واحدة شهريًا.
- عند تجميع المكثف بعد تنظيفه، تأكد من ضبط المكثف المثبت على وضع الغلق.

SDC1A809-02805J-05_AR_140507.indd Sec10:26 2014-05-07 6:30:51

تلميحات خاصة حول الغسيل

تلميحات خاصة حول الغسيل

الرجاء اتباع بطاقة العناية أو تعليمات الشركة المصنعة لتجفيف الأنواع الخاصة من الملابس إذا كانت تعليمات بطاقة العناية غير متوفرة. استخدم المعلومات التالية كدليل لك.

أغطية السرير والأخفة	• اتبع تعليمات بطاقة العناية أو قم بالتجفيف من خلال الدورة Cupboard (خزانة) الخاصة بالملابس القطنية على أن تكون درجة الحرارة هي High (عالية). • تأكد من جَفيف قطعة الملابس بصورة تامة قبل الاستخدام أو التخزين. • قد يتطلب الأمر تغيير وضع الملابس لضمان التجفيف المناسب.
البطانيات	• استخدم الدورة Cupboard (خزانة) الخاصة بـ Cotton (الملابس القطنية) ثم قم بتجفيف بطانية واحدة فقط في كل مرة للوصول إلى أفضل إجراء للدوران. • تأكد من جَفيف قطعة الملابس بصورة تامة قبل الاستخدام أو التخزين.
الحفاضات القماش	• استخدم الإعدادين Cupboard و High لكل من الملابس القطنية ودرجة الحرارة على التوالي في حالة الحفاضات الناعمة والرقيقة.
العناصر الخفيفة التي تساعد على التدفئة (السَترات وحقائب النوم والأخفة وما إلى ذلك)	• استخدم Cupboard (خزانة) والإعداد Low (منخفض) أو الإعداد درجة الحرارة المنخفضة. • تعمل إضافة منشفتين جافتين على تقليل وقت التجفيف وامتصاص الرطوبة.
المطاط الأسفنجي (ظهر السجاجيد والدمى المحشوة ووسائد الأكتاف وما إلى ذلك)	• لا تقم بالتجفيف مع إعداد الهواء الساخن. استخدم الدورة Cool Air (هواء بارد) بلا تسخين. • تحذير - قد يؤدي جَفيف أحد العناصر المصنوعة من المطاط بالهواء الساخن إلى تلفه أو خطر حدوث حريق.
الوسائد	• استخدم Cupboard (خزانة) الخاص بـ Cotton (الملابس القطنية). • أضف منشفتين جافتين للمساعدة في إجراء جَفيف بالدوران ولجعل قطعة الملابس ناعمة. • لا تقم بتجفيف الوسائد المحشوة بالألياف الحريرية (الكابوك) أو المواد الأسفنجية في المجفف. استخدم الدورة Cool Air (هواء بارد).
البلاستيكيات (ستائر الحمامات وأغطية الأثاث الموجود في الأماكن الخلوية وما إلى ذلك)	• استخدم الدورة Cool Air (هواء بارد) أو الدورة Time Dry (مدة التجفيف) والإعداد Low (منخفض) أو الإعداد Low temperature (درجة حرارة منخفضة) وذلك وفقًا لتعليمات بطاقة العناية.

أشياء يجب جَنبها:

- الأقمشة المصنوعة من الفيبرجلاس (الستائر وأغطية الأثاث الفضفاضة وما إلى ذلك)
- الملابس الصوفية، ما لم يكن موصى بذلك في البطاقة.
- الملابس الملوثة بالزيوت النباتية أو الطعام.

SDC1A809-02805J-05_AR_140507.indd Sec8:27 2014-05-07 6:30:52

استكشاف المشاكل وحلها

تحقق مما يلي إذا كان المجفف...

المشكلة	الحل
لا يعمل.	• تأكد من إغلاق الباب بإحكام. • تأكد من توصيل سلك الطاقة بمخرج التيار الكهربائي المباشر. • افحص مفتاح قاطع الدائرة الكهربية وفواصم الكهرباء في المنزل. • اضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت) مرة أخرى في حالة فتح باب المجفف أثناء الدورة. • افرغ الماء الموجود في خزان الماء المكثف. • قم بتنظيف حاوية المصفاة.
لا يقوم بالتسخين.	• افحص مفتاح قاطع الدائرة الكهربية وفواصم الكهرباء في المنزل. • حدد إعداد الهواء الساخن بدلاً من الإعداد Cool Air (هواء بارد). • افحص مصفاة الحلة والمكثف ثم قم بتنظيفهما إذا لزم الأمر. • ربما يكون المجفف قد انتقل إلى مرحلة التبريد أثناء الدورة.
لا يقوم بالتجفيف.	• افحص كل ما سبق. علاوة على ما يلي... • لا تتجاوز الوزن المحدد. حمولة الغسيل = حمولة التجفيف. • فرز الملابس الثقيلة عن الملابس خفيفة الوزن. • قد تتطلب العناصر الكبيرة والضخمة مثل البطانيات أو الألحفة تغيير الوضع لضمان التجفيف المناسب. • تحقق من أن دورة تصريف المجفف تعمل بشكل سليم لاستخراج كمية الماء الكافية من الملابس. • قد يكون حجم الملابس صغير جدًا للمساعدة في الدوران بشكل ملائم. أضف بعض المناشف. • قم بتنظيف حاوية المصفاة. • قم بتنظيف المكثف. • قم بالتحقق من أن فتحة الهواء البارد غير مسدودة.
يصدر صوتًا مرتفعًا.	• افحص ما إذا كانت الملابس تحتوي على بعض الأشياء مثل العملات المعدنية أو الأزرار المفكوكة أو المسامير وما إلى ذلك. قم بإخراجها على الفور. • تأكد من ضبط المجفف على المستوى المناسب كما هو مذكور في إرشادات التركيب. • من الطبيعي أن يصدر المجفف طنينًا وذلك بسبب السرعة العالية لانتقال الهواء خلال حاوية المجفف والمروحة.
يقوم بالتجفيف بشكل غير متساوٍ.	• قد لا يتم تجفيف التجعيدات والجيوب والمناطق الصعبة المماثلة بشكل تام في حالة وصول باقي الملابس إلى مستوى التجفيف المحدد. ويكون هذا أمرًا طبيعيًا. حدد الإعداد Extra Dry (تجفيف فائق) في حالة الرغبة في ذلك. • إذا تم تجفيف قطعة ملابس ثقيلة مع ملابس خفيفة الوزن، مثل منشفة مع ملاءات، فمن الممكن أن لا يتم تجفيف قطعة الملابس الثقيلة بشكل تام في حالة وصول باقي حمولة الغسيل إلى مستوى التجفيف المحدد. قم بفرز الملابس الثقيلة من الملابس خفيفة الوزن للوصول إلى أفضل نتائج لعملية التجفيف.
يصدر رائحة.	• قد تدخل الروائح المنزلية الناتجة عن الطلاء والدهان والمنظفات ذات الروائح القوية وما إلى ذلك إلى المجفف مع الهواء المحيط بالغرفة. ويكون هذا أمرًا طبيعيًا طالما أن المجفف يقوم بشفط الهواء من الغرفة ويحوله إلى هواء ساخن ويسحبه من خلال الحاوية ثم يقوم بإطلاقه إلى الخارج. • في حالة بقاء تلك الروائح في الهواء، قم بتهوية الغرفة قبل استخدام المجفف.
يتوقف عن التشغيل قبل تجفيف حمولة الغسيل.	• حجم الحمولة في المجفف صغير جدًا. أضف المزيد من قطع الملابس أو بعض المناشف ثم قم بإعادة تشغيل الدورة. • حجم الحمولة في المجفف كبير جدًا. قم بإزالة بعض قطع الملابس ثم قم بإعادة تشغيل المجفف.

SDC1A809-02805J-05_AR_140507.indd Sec6:28 2014-05-07 6:30:52

المشكلة	الحل
وجود نسالات على الملابس.	• تأكد من تنظيف مصفاة النسالات قبل كل استخدام. مع بعض أنواع الملابس التي ينتج عنها كمية كبيرة من النسالات، قد يكون من الضروري تنظيف حاوية المصفاة أثناء الدورة. • هناك بعض الأنسجة ينتج عنها نسالات (على سبيل المثال، المنشفة القطنية البيضاء المغطاة بالنسالات). لذا ينبغي تجفيفها بشكل منفصل عن الملابس التي تلتقط النسالات (على سبيل المثال، زوجين من السراويل الكتان السوداء) • قم بتقسيم الأحجام الكبيرة من الملابس إلى أحجام صغيرة لإجراء عملية التجفيف • افحص الجيوب جيدًا قبل إجراء عملية التجفيف وقبل تجفيف الملابس.
لا يزال هناك بعض التجعيد في الملابس رغم تشغيل وضع مانع التجعيد.	• يؤدي اختيار الحمولات الصغيرة التي تتكون من ١ إلى ٤ قطع ملابس إلى الحصول على أفضل نتيجة. • ضع حجمًا أقل من الملابس. ضع الأنواع المتشابهة من الملابس.
تظل الروائح في الملابس بعد التنظيف.	• ينبغي غسل الأنسجة التي تحتوي على روائح قوية.

SDC1A809-02805J-05_AR_140507.indd Sec6:29 2014-05-07 6:30:52

استكشاف المشاكل وحلها

رموز المعلومات

قد يتم عرض رموز المعلومات للمساعدة في فهم ما يحدث في المجفف بصورة أفضل.

عرض الأخطاء	المعنى	الحل
tE2	حاوية المصفاة المسدودة متوقفة عن العمل.	قم بتنظيف حاوية المصفاة أو المكثف. إذا استمرت هذه المشكلة اتصل بخدمة الدعم لتلقي المساعدة.
tE4		
dE	تشغيل المجفف ويكون الباب مفتوحًا.	أغلق الباب ثم قم بإعادة التشغيل. إذا استمرت المشكلة اتصل بخدمة الدعم لتلقي المساعدة.
dF	الباب غير مغلق بطريقة صحيحة.	اتصل بالخدمة لتلقي المساعدة.
bE	الزر عالق لأكثر من ٣٠ ثانية.	تأكد من عدم الضغط باستمرار على الزر. حاول إعادة تشغيل الدورة. إذا استمرت المشكلة اتصل بخدمة الدعم لتلقي المساعدة.
hE	حاوية المصفاة المسدودة متوقفة عن العمل. اختيار درجة حرارة التسخين غير صالح أثناء تشغيل المجفف.	قم بتنظيف حاوية المصفاة أو المكثف. إذا استمرت هذه المشكلة اتصل بخدمة الدعم لتلقي المساعدة.
Et	EEPROM غير موصل بشكل سليم.	حاول إعادة تشغيل الدورة. إذا استمرت المشكلة اتصل بخدمة الدعم لتلقي المساعدة.
3E	المحرك لا يعمل بشكل سليم.	حاول إعادة تشغيل الدورة. إذا استمرت المشكلة اتصل بخدمة الدعم لتلقي المساعدة.
5E	خزان الماء ممتلئ بالماء. مضخة التصريف لا تعمل.	أفرغ خزان الماء ثم قم بالتشغيل مرة أخرى. إذا استمرت هذه المشكلة اتصل بخدمة الدعم لتلقي المساعدة.

بالنسبة للرموز التي لم يتم ذكرها أعلاه، أو في حالة عدم مساهمة الحل المقترح في حل المشكلة، اتصل بمركز خدمة Samsung أو الموزع المحلي لـ Samsung.

SDC1A809-02805J-05_AR_140507.indd Sec6:30 2014-05-07 6:30:52

الملحق

جدول العناية بالأقمشة

توضح الرموز التالية إرشادات للعناية بالملابس. تتضمن بطاقات العناية بالملابس رموزًا للتجفيف أو التبييض أو التجفيف والكي أو التنظيف الجاف إذا لزم الأمر. ويضمن استخدام هذه الرموز التناسق بين الشركات المصّنعه للملابس المحلية والمستوردة. عليك باتباع إرشادات بطاقة العناية لزيادة عمر الملابس وتقليل مشاكل الغسيل.

دورة الغسيل		تعليمات خاصة		رموز تحذيرية لعملية الغسيل	
عادي		التجفيف على حبل الغسيل / التعليق للتجفيف		عدم الغسل	
الضغط الدائم / مقاوم التجعيد / التحكم في التجعيد		التجفيف بدون تجعيد		بدون عصر	
الملابس الناعمة/الرقيقة		التجفيف في حالة الفرد		عدم استخدام المبيضات	
الغسل اليدوي		**إعداد الحرارة**		ممنوع التجفيف بالتدوير	
درجة حرارة الماء**		عالية		بدون بخار (وهي مضافة في عملية الكي)	
••• ساخنة		متوسطة		ممنوع الكي	
•• دافئة		منخفضة		**التنظيف الجاف**	
• باردة		أية درجة حرارة		التنظيف الجاف	
التبييض		بدون حرارة / هواء		ممنوع استخدام التنظيف الجاف	
أية مادة تبييض (إذا لزم الأمر)		**التجفيف بالكي أو درجة حرارة التجفيف بالبخار**		التجفيف على حبل الغسيل / التعليق للتجفيف	
فقط بدون كلور (حماية الألوان) التبييض (إذا لزم الأمر)		عالية		التجفيف بدون تجعيد	
دورة التجفيف بالتدوير		متوسطة		التجفيف في حالة الفرد	
عادي		منخفضة			
الضغط الدائم / مقاوم التجعيد / التحكم في التجعيد					
الملابس الناعمة/الرقيقة					

** تعبر رموز النقاط الموجودة أعلاه عن درجات حرارة الماء المناسبة لأنواع الملابس المختلفة. ويكون نطاق درجات الحرارة في حالة السخونة يتراوح ما بين ٤١° - ٥٢° درجة مئوية وفي حالة الدفء تتراوح ما بين ٢٩° - ٤١° درجة مئوية أما في حالة البرودة تتراوح ما بين ١٦° - ٢٩° درجة مئوية
(يجب أن يكون الحد الأدنى لدرجة حرارة الماء عند الغسيل هي ١٦° درجة مئوية وذلك لتنشيط مسحوق الغسيل وللحصول على عملية تنظيف فعّالة).

SDC1A809-02805J-05_AR_140507.indd Sec4:31 2014-05-07 6:30:52

الملحق

حماية البيئة

هذا الجهاز مصنوع من مواد قابلة لإعادة التدوير. إذا قررت التخلص من هذا الجهاز، يرجى مراعاة القوانين المحلية الخاصة بالتخلص من النفايات. اقطع سلك التيار بحيث لا يمكن توصيل الجهاز بمصدر للطاقة. قم بإزالة الباب لمنع تعرض الحيوانات أو الأطفال الصغار للاحتباس داخل الجهاز.

بيان التوافق

يتوافق هذا الجهاز مع مقاييس السلامة الأوروبية EC directive 93/68 و EN Standard 60335.

المواصفات

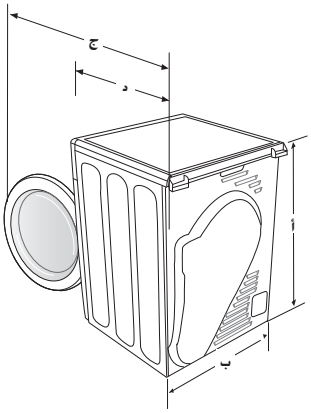

النوع		مجفف ملابس بفتحة تحميل أمامية
الأبعاد	أ. الارتفاع	٨٤,٨ سم
	ب. العرض	٥٩,٨ سم
	ج. العمق على أن يكون الباب مفتوحًا بمقياس ٩٠°	١٠٨,٦ سم
	د. العمق	٦٣,٤ سم
الوزن		٤٤,٥ كجم
تصنيف السخان		٢٥٠٠ واط (١٧٥٠ واط + ٧٥٠ واط)
استهلاك الطاقة	بدون الحرارة	١٧٥ واط
	التسخين	٢٦٧٥ واط
إضاءة الحاوية		المصباح المشع للضوء (يختلف حسب الطراز)

لاستبدال ضوء المصباح المشع للضوء، الرجاء الاتصال بخط خدمة الدعم للمساعدة.

SDC1A809-02805J-05_AR_140507.indd Sec4:32 2014-05-07 6:30:52

جدول الدورات

(● الاختيار للمستخدم)

الدورة		أقصى وزن (كجم) (ملابس جافة)	درجة الحرارة	الوقت	تأجيل التوقف	الدورة المفضلة	جرس الحمولة المتنوعة	المصباح الداخلي	مانع التجعيد	إيقاف تشغيل الصوت	وقت التبريد (بالدقائق)
الملابس القطنية	تجفيف فائق	٨	عالية	١٣٤	●	●	●	●	●	●	٥
	تجفيف خزانة		عالية	١١٩	●	●	●	●	●	●	٥
	التجفيف بالكي		عالية	٩٩	●	●	-	●	●	●	٥
الألياف الصناعية	تجفيف فائق	٤	متوسطة	٥٩	●	●	●	●	●	●	٥
	تجفيف خزانة		متوسطة	٤٩	●	●	●	●	●	●	٥
	التجفيف بالكي		متوسطة	٣٩	●	●	-	●	●	●	٥
• الصوف M1006 (رقم اعتماد شركة Woolmark)		١	منخفضة	٢٧	●	●	-	●	●	●	١
نعومة فائقة		١	منخفضة	٣٥	●	●	●	●	●	●	٣
الإنعاش		١,٥	عالية	٣٠	●	●	-	●	●	●	٥
ملابس رياضية		١,٥	منخفضة	٥٠	●	●	●	●	●	●	٥
تجفيف سريع		-	عالية	٢٩	●	●	-	●	●	●	٨
مدة التجفيف		-	عالية	٤٠	●	●	-	●	●	●	٨
هواء دافئ		-	منخفضة	٢٠	●	●	-	●	●	●	٥
هواء بارد		-	غير متوفر	٢٠	●	●	-	●	●	●	

• بناءً على نسبة الملابس الصوفية في الغسيل، قد يمتد الوقت ليصل إلى ٤٣ دقيقة.

SDC1A809-02805J-05_AR_140507.indd Sec4:33 2014-05-07 6:30:52

الملحق

بيانات الاستهلاك

البرنامج	الحمولة (كجم) ١	أقصى سرعة للتجفيف في الغسالات المحلية (لفة في الدقيقة)	الطاقة (كيلو واط في الساعة)	المدة (بالدقائق)
خزانة القطن	٨	١٠٠٠ (٦٠ ٪ من نسبة الرطوبة المتبقية) ** ١٤٠٠ (٥٠ ٪ من نسبة الرطوبة المتبقية)	٥,١٣ ٤,٧٨	١٤٥ ١٣٥
كي القطن	٨	١٠٠٠ (٦٠ ٪ من نسبة الرطوبة المتبقية) ** ١٤٠٠ (٥٠ ٪ من نسبة الرطوبة المتبقية)	٤,٥٣ ٣,٩٤	١٠٥ ٩٦

١. * : وزن الملابس الجافة

** : برنامج الاختبار EN 61121:2013

٢. تم احتساب كافة البيانات التي تم وضع "نجمة" بجانبها باستخدام EN 61121:2013

يمكن أن تختلف بيانات الاستهلاك عن القيم الرمزية التي تم ذكرها أعلاه وفقًا لحجم الحمولة من الملابس ولأنواع المنسوجات ومستويات الرطوبة المتبقية بعد التدوير وعدد مرات حدوث انقطاع للتيار الكهربي والخيارات الإضافية المحددة.

SDC1A809-02805J-05_AR_140507.indd Sec4:34 2014-05-07 6:30:52

بيان المجففات الدوارة المنزلية

وفقًا للائحة (الاتحاد الأوروبي) رقم 392/2012

Samsung		
اسم الطراز		SDC1A809 / SDC3K801
السعة	كجم	٨
النوع		المكثف
كفاءة استهلاك الطاقة		
من A+++ (أعلى كفاءة) إلى D (أقل كفاءة)		C
استهلاك الطاقة		
الاستهلاك السنوي للطاقة (AE_C)[1]	كيلو واط في الساعة/سنة	٦١٠
مكتشف التجفيف التلقائي		نعم
استهلاك الطاقة (E_dry) لبرنامج القطنيات القياسي بحمولة كاملة	كيلو واط في الساعة	٥,١٣
استهلاك الطاقة (E_dry.1/2) لبرنامج القطنيات القياسي بحمولة جزئية	كيلو واط في الساعة	٢,٧١
وضع إيقاف التشغيل ووضع استمرار التشغيل		
استهلاك الطاقة في وضع إيقاف التشغيل (P_o) بحمولة كاملة	واط	٠,٥٠
استهلاك الطاقة في وضع استمرار التشغيل (P_l) بحمولة كاملة	واط	٥,٠٠
مدة وضع استمرار التشغيل	د	١٠
البرنامج ذو الصلة بالمعلومات الموجودة على الملصق والبيان[2]		قطن + تجفيف خزانة
مدة البرنامج للبرنامج القياسي		
الوقت المقدر لبرنامج القطنيات القياسي بحمولة كاملة وجزئية	د	١١٠
وقت البرنامج (T_dry) لبرنامج القطنيات القياسي بحمولة كاملة	د	١٤٥
وقت البرنامج (T_dry.1/2) لبرنامج القطنيات القياسي بحمولة جزئية	د	٨٤
فئة كفاءة التكثف		
من A (الأكثر كفاءة) إلى G (الأقل كفاءة)		C
كفاءة التكثف المقدرة	٪	٧١
متوسط كفاءة التكثف بحمولة كاملة	٪	٧١
متوسط كفاءة التكثف بحمولة جزئية	٪	٧١
انبعاثات الضوضاء في الهواء		
التجفيف بحمولة كاملة	ديسيبل (A) بمستوى إسناد ١ بيكو وات	٦٦
اسم الشركة		Samsung Electronics Co., Ltd.

١. يبلغ استهلاك الطاقة بمقدار ٦١٠ كيلو واط في الساعة لكل سنة. وذلك وفقًا لدورات تجفيف عددها ١٦٠ دورة لبرنامج القطنيات القياسي بحمولة كاملة وجزئية وللاستهلاك في أوضاع الطاقة المنخفضة. بينما سيعتمد استهلاك الطاقة الفعلي في كل دورة على كيفية استخدام الجهاز.

٢. "برنامج القطنيات القياسي" المستخدم بحمولة كاملة وجزئية هو برنامج التجفيف القياسي ذي الصلة بالمعلومات الموجودة على الملصق والبطاقة التي توضح أن هذا البرنامج مناسب لغسل القطنيات العادية المبتلة. وهو الأكثر فعالية فيما يتعلق باستهلاك الطاقة مع القطنيات.

SDC1A809-02805J-05_AR_140507.indd Sec4:35 2014-05-07 6:30:52

هل لديك أسئلة أو تعليقات؟

البلد	اتصل بنا	أو قم بزيارة موقعنا على الإنترنت على
U.A.E	800-SAMSUNG (726-7864)	www.samsung.com/ae/support (English) www.samsung.com/ae_ar/support (Arabic)

DC68-02805J-05

SDC1A809-02805J-05_AR_140507.indd Sec4:36 2014-05-07 6:30:52